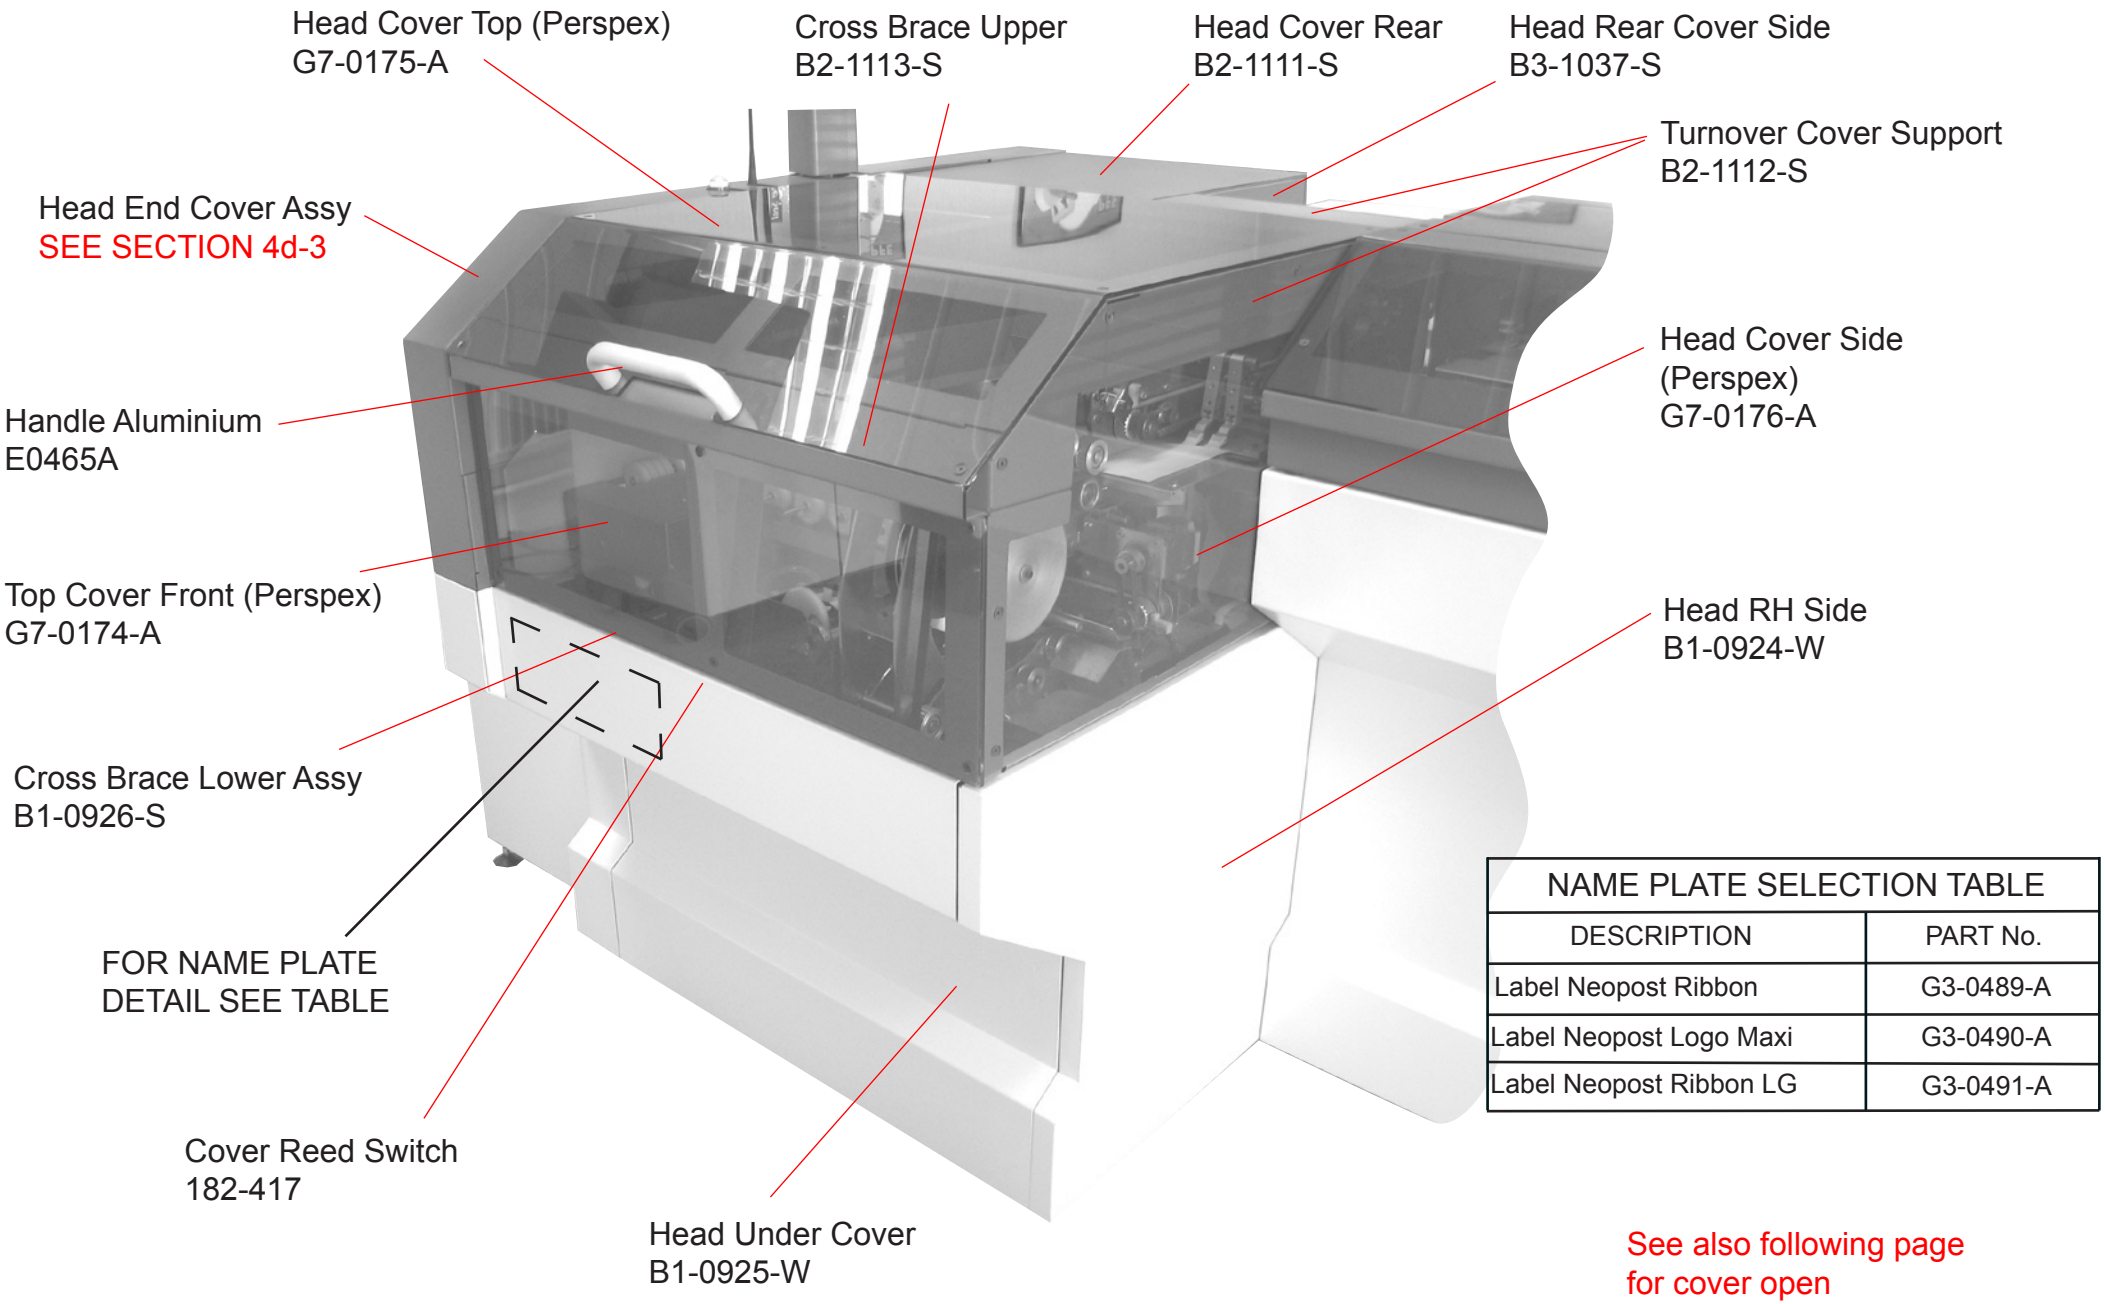

NAME PLATE SELECTION TABLE	
DESCRIPTION	PART No.
Label Neopost Ribbon	G3-0489-A
Label Neopost Logo Maxi	G3-0490-A
Label Neopost Ribbon LG	G3-0491-A

See also following page
for cover open

4d.1 - Insert Head Covers (closed)

Foot Rubber
E0574A x 2
Washer 8.9 Dia
E4-0080-A x 2

LH Side Arm
B2-1109-S

Bracket LH (this side)
B2-1851-S
Bracket RH (other side)
B2-1871-S
Screw M6 x 10 Cap Hd
M6 Washer

Head Strut Pivot Long
C5-1242-A

Switch Magnet Small
131-824
Sensor Plate
B3A-A0007407*

* Double sided tape on Sensor Plate to be towards Switch Magnet

Cross Brace Lower Assy
B1-0926-S

Head Cover Side (Perspex)
G7-0176-A

Rod End 2 12 Dia
C6-0444-P
Collar
C2-1204-P
Bearing Fl 12x21x5
E1087A

RH Side Arm
B2-1110-S

Gas Spring 1200n
G0175A

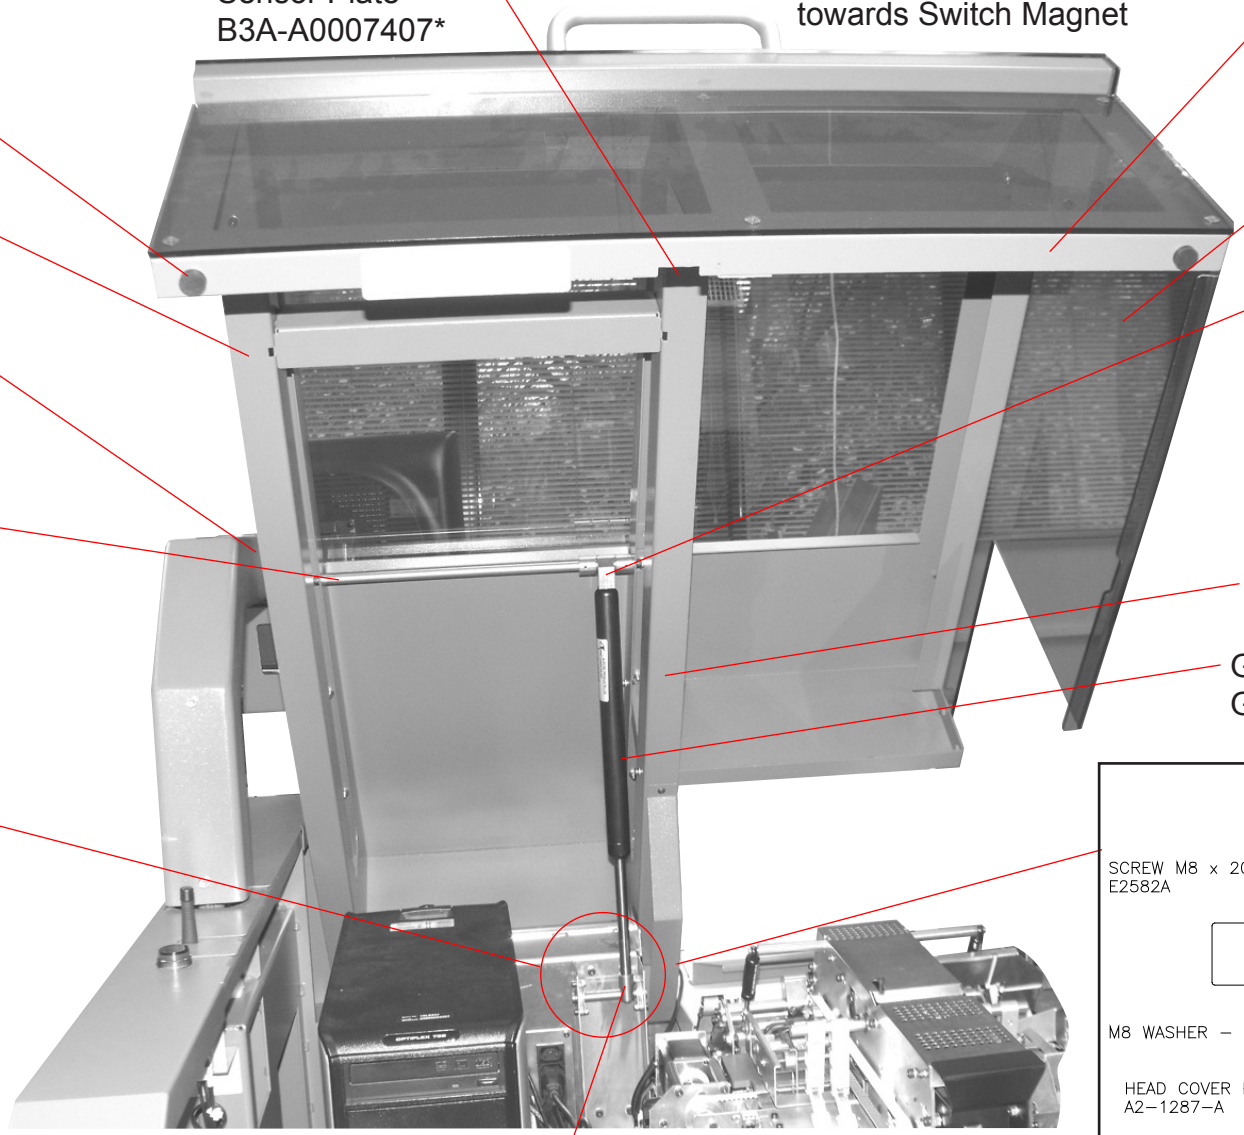

G4031A Bearing Hsg 12mm x 2
E1054A Bearing Ball 12mm x 2
B7046P Bearing Plate x 2
E2524A Cap Hd Screw M4x16 x 4
E3505A M4 Nyloc Nut x 4
E4011A M4 Washer x 8

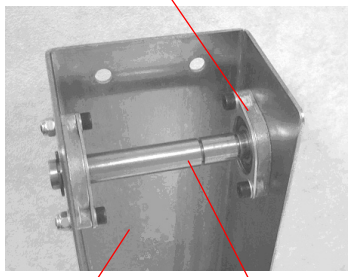

B2-1090-P Support x 1

C4-0513-A Shaft St Pivot Support x 1

E5092A 'E' Clip 12mm x 4

Support Body Brace Kit
A0-0473-A

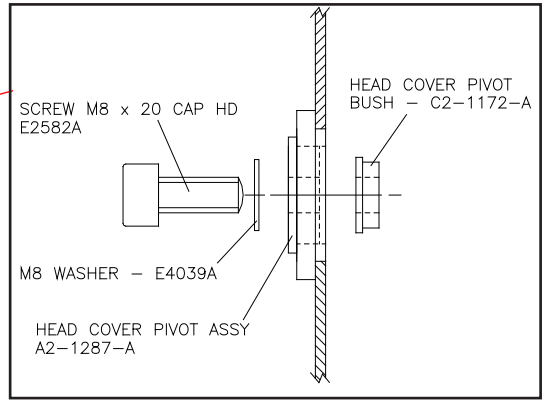

Rod End 12mm
C3662A

See also previous page for cover closed

4d.2 - Insert Head Covers (open)

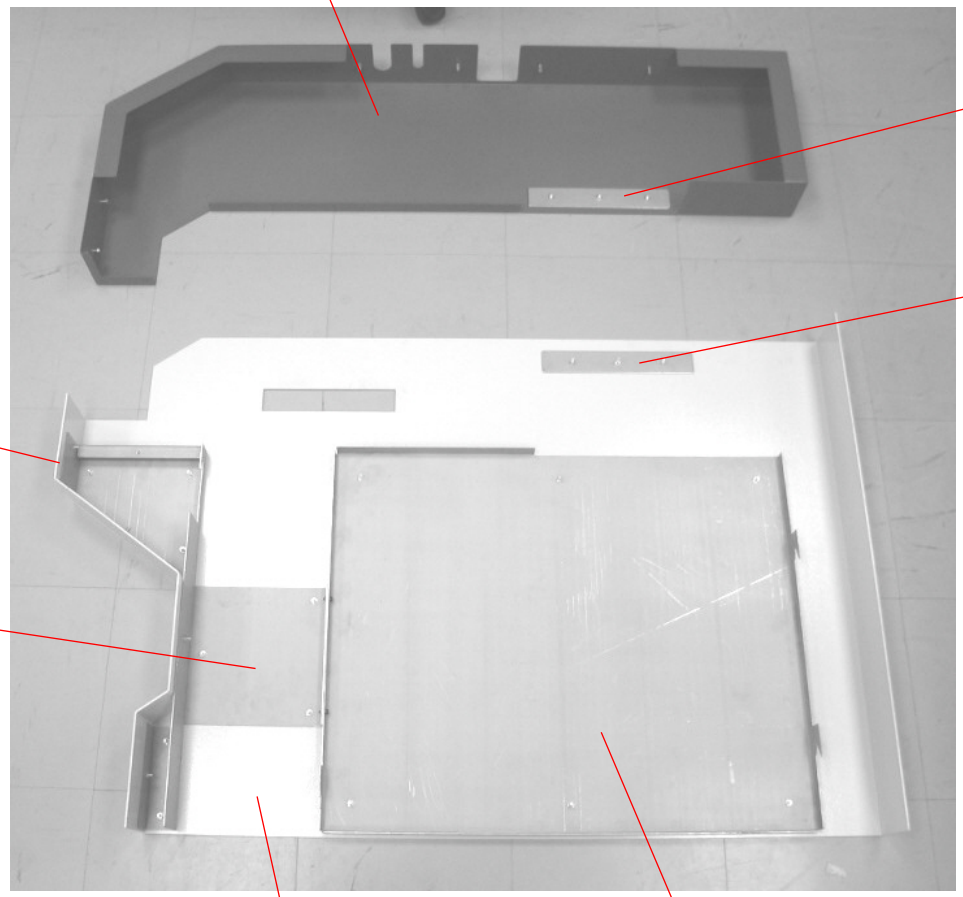

4d.3 - Insert Head End Covers

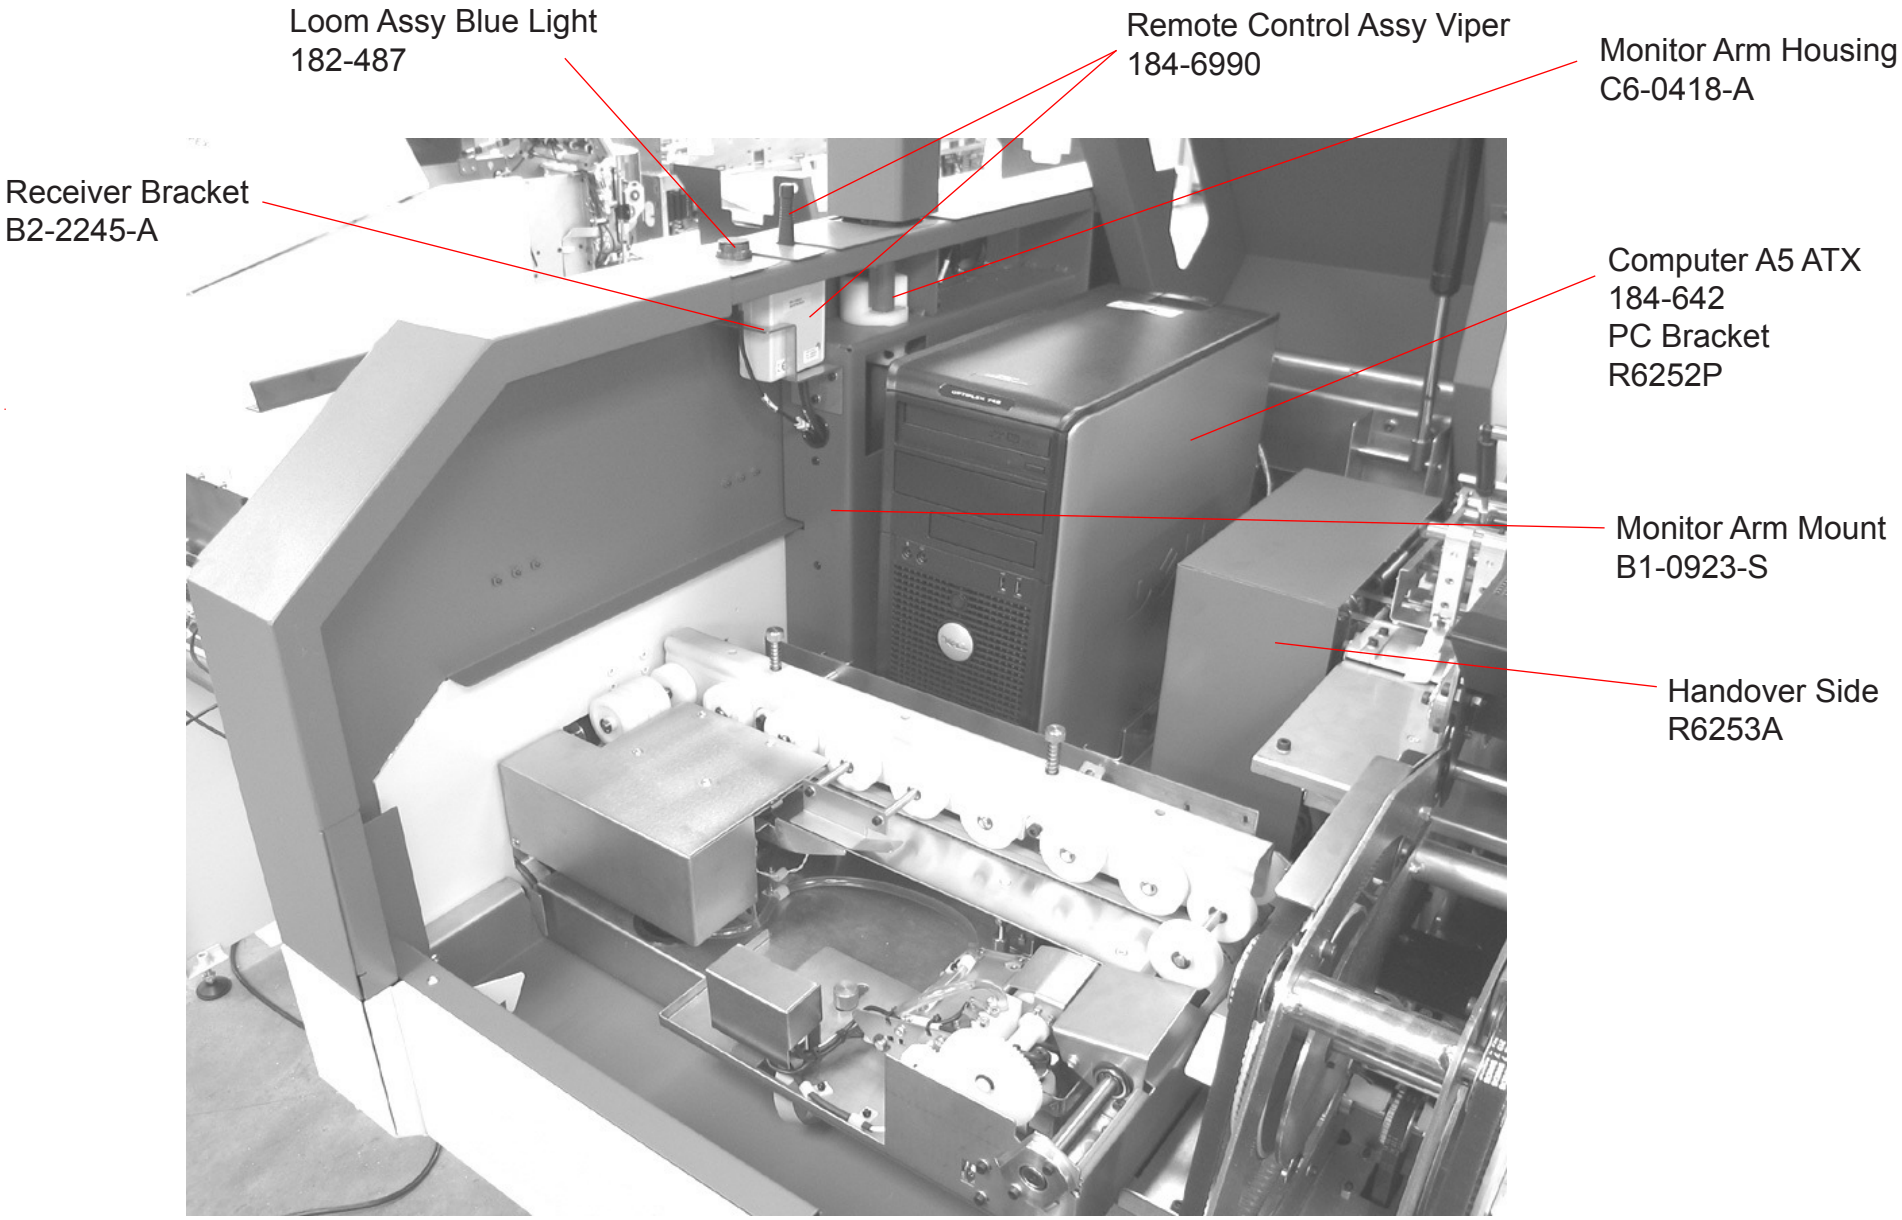

4d.4 - PC Components

Important: Note order and direction of disc springs carefully.

ELO 1915L Touchmonitor
184-650

Monitor Mid Arm
C7-0424-S

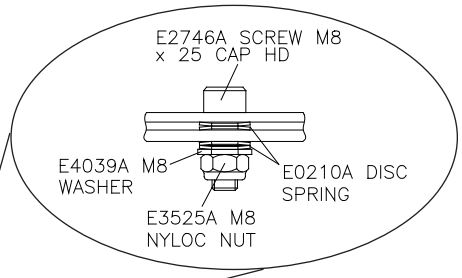

Monitor Main Arm Assy
B4-0441-S (arm) &
B4-0442-S (post)
Bearing Plate (brass)
B2-1122-A
2 x M8 x 50mm
Socket Cap Hd
Stainless Steel Screws
E2-0887-A

Monitor Mount Assy
B4-0434-S

PC Mini Keyboard
184-403

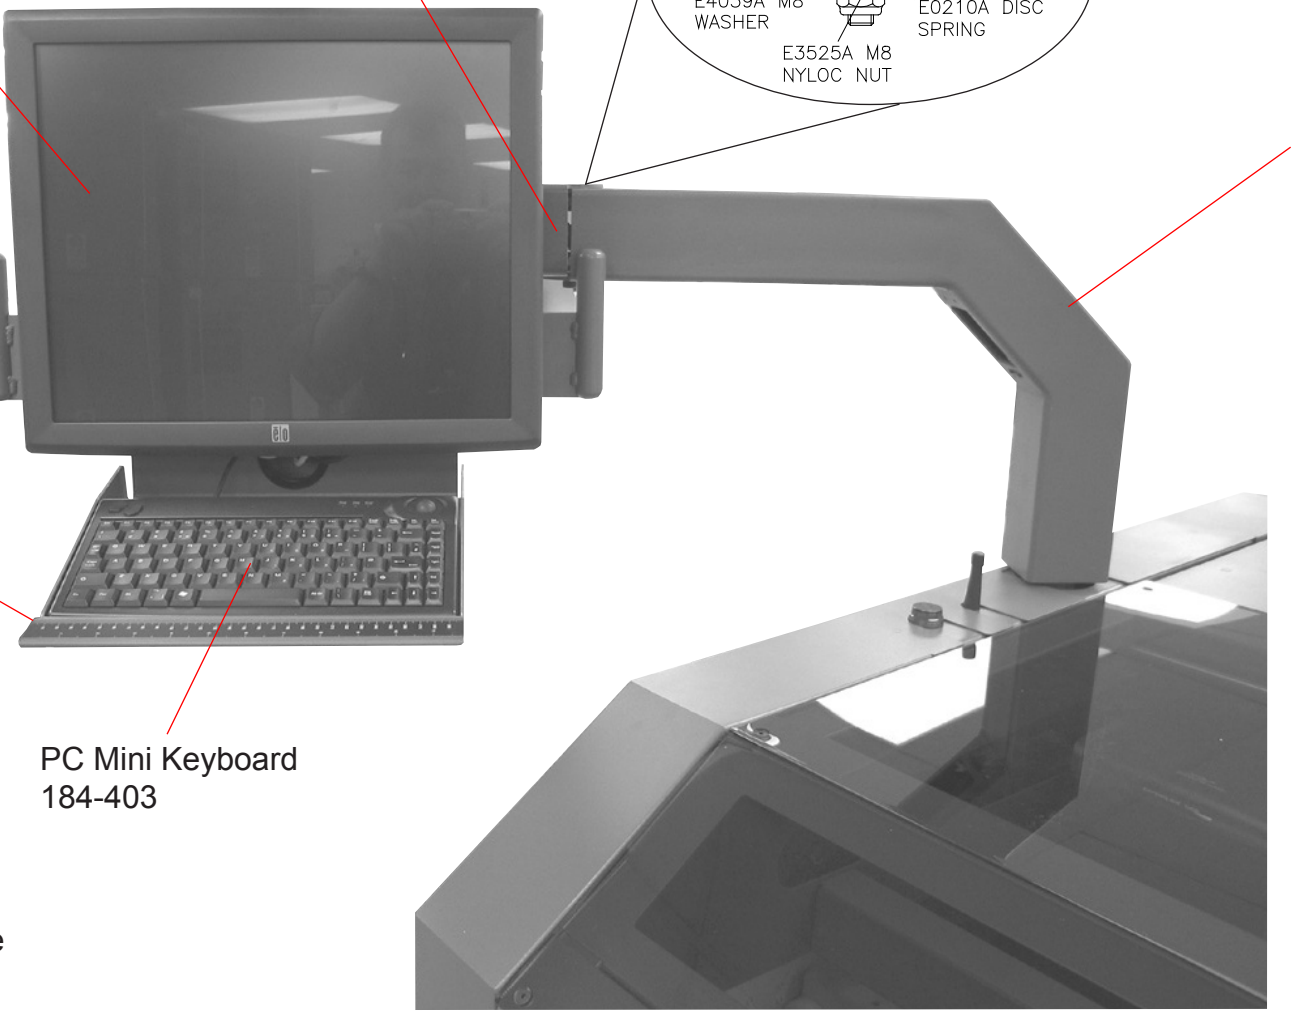

Wiring:
179-834 USB Extension Cable
179-835 Lead VGA H/D 15W

4d.5 - Monitor Arm

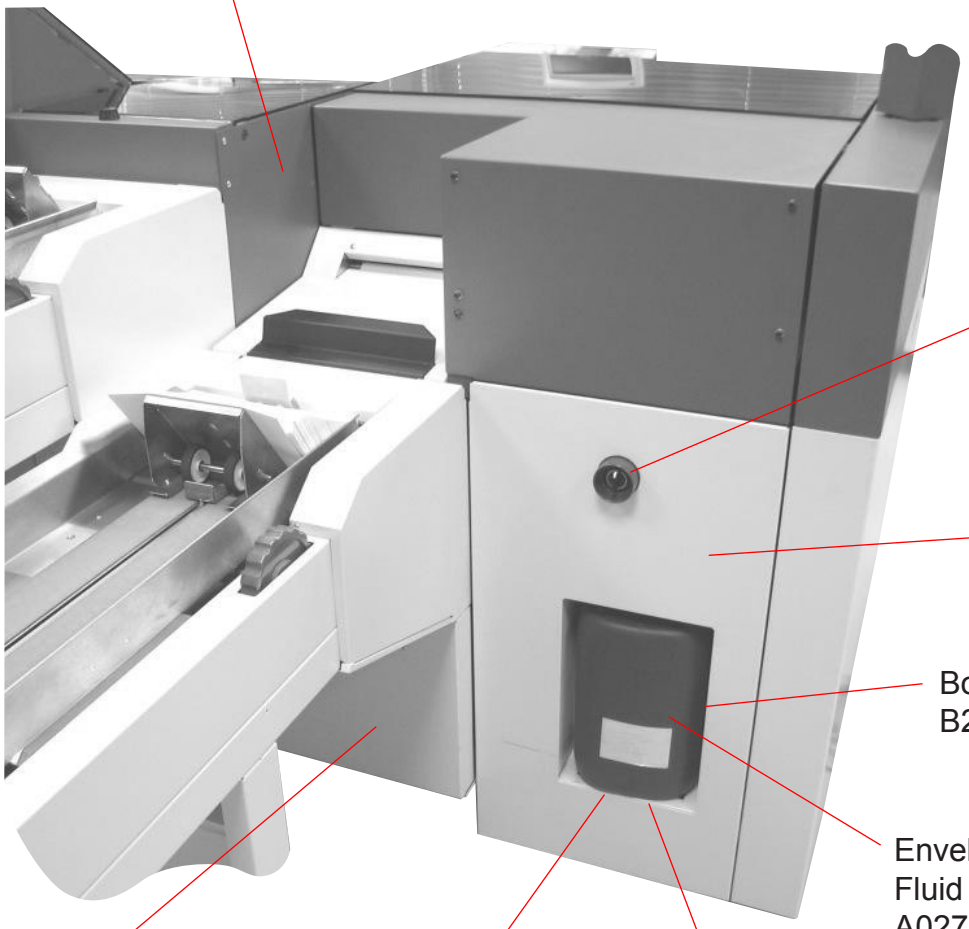

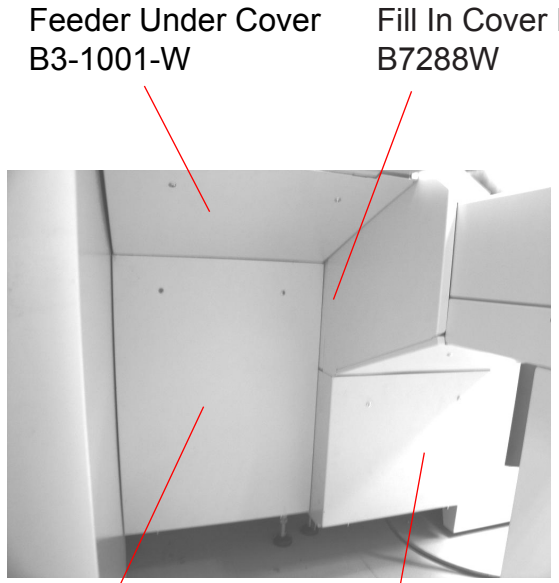

4d.6 - Insert Head Rear Covers

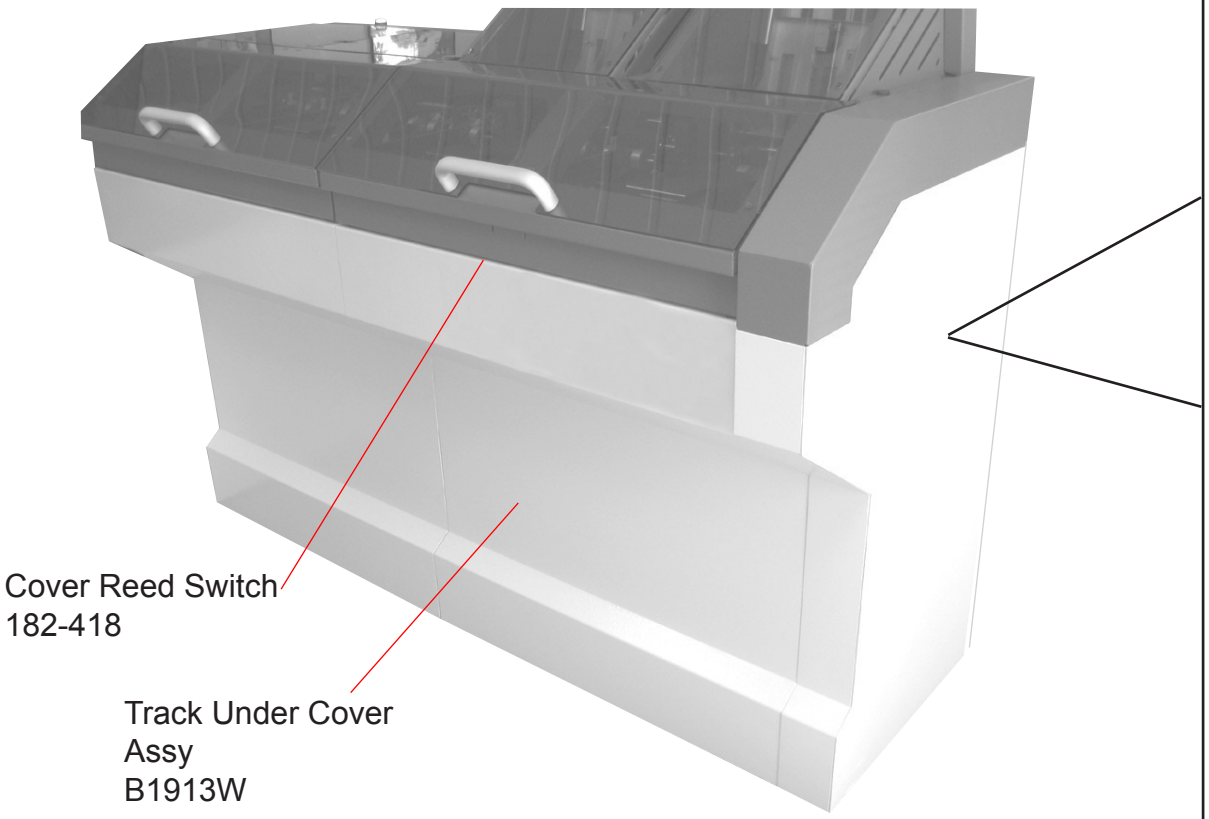

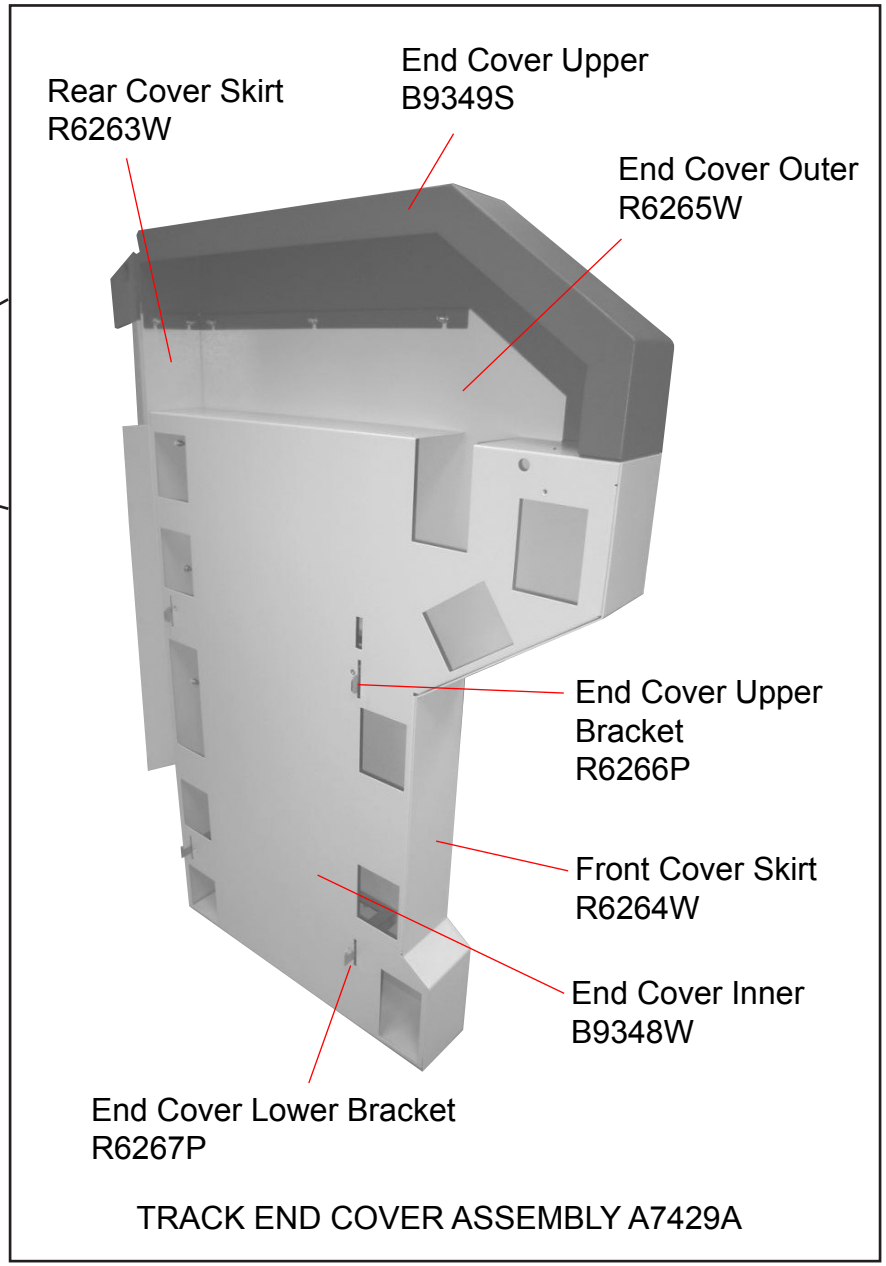

4d.7 - Track Covers

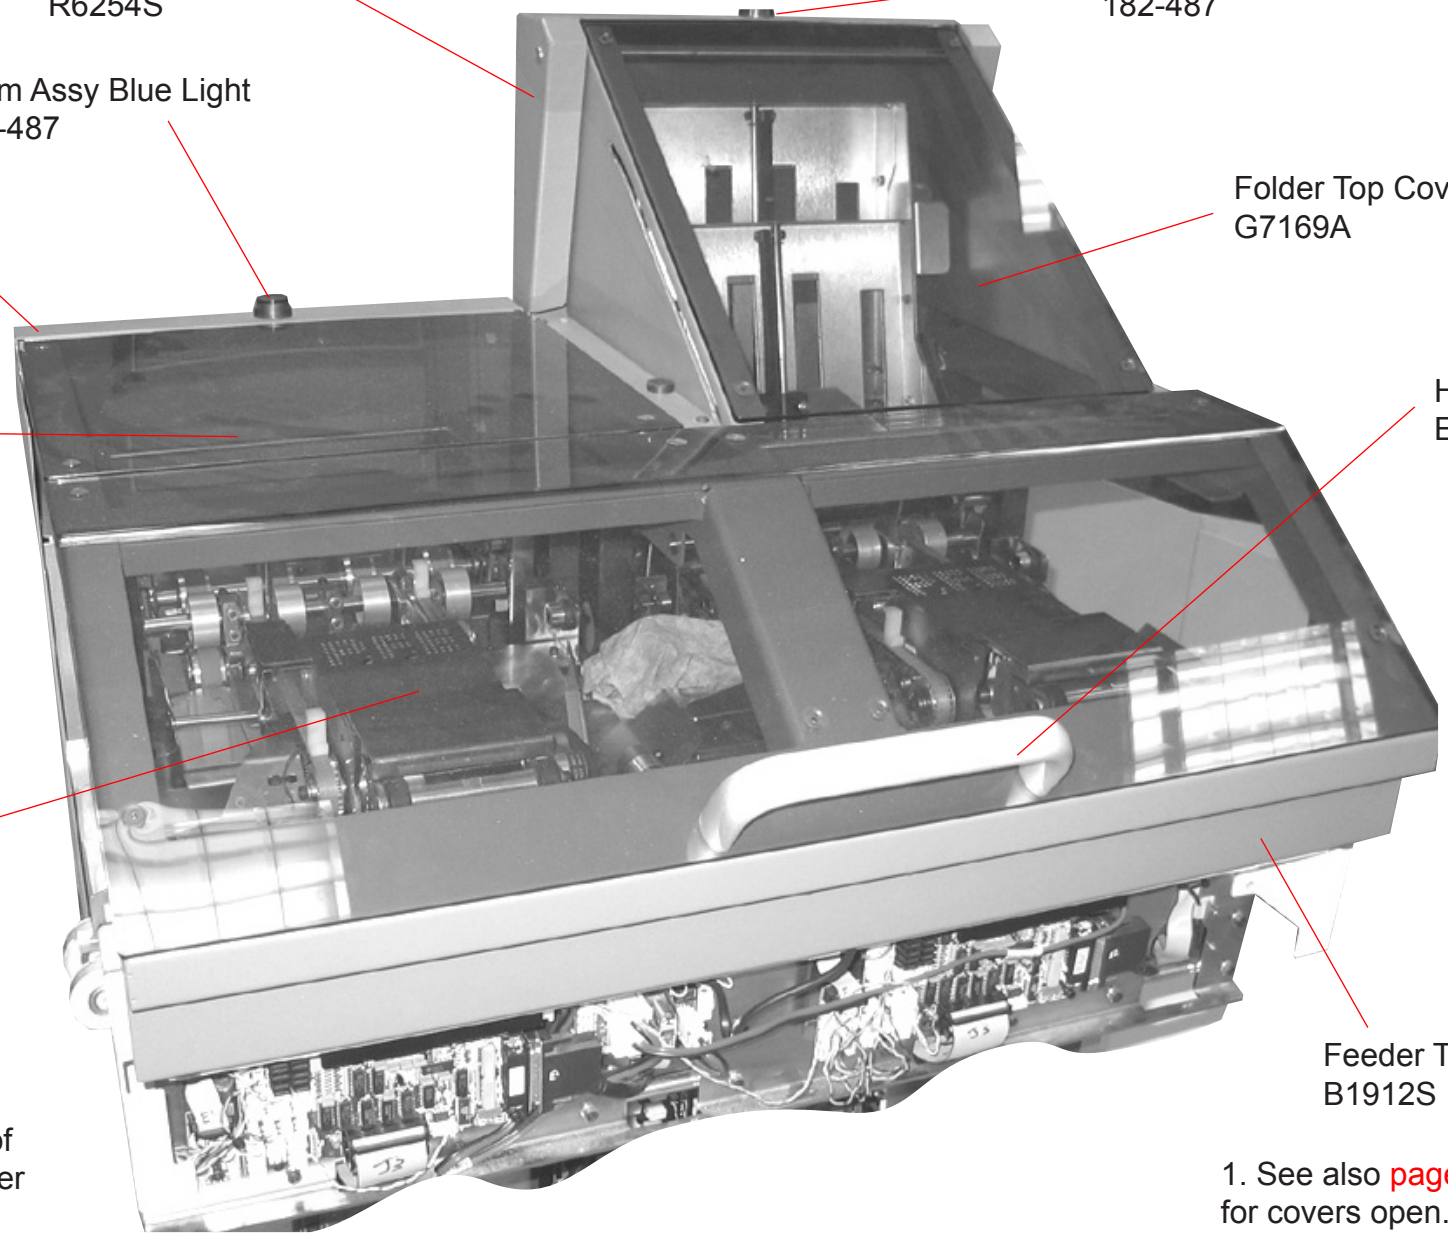

*W/D Fan 60mm 24V
181-157 fitted to rear of
each feeder/folder cover

1. See also page 4d-9
for covers open.
2. See also page 4d-10
for assembly structures.

4d.8 - Feeder & Folder Covers (closed)

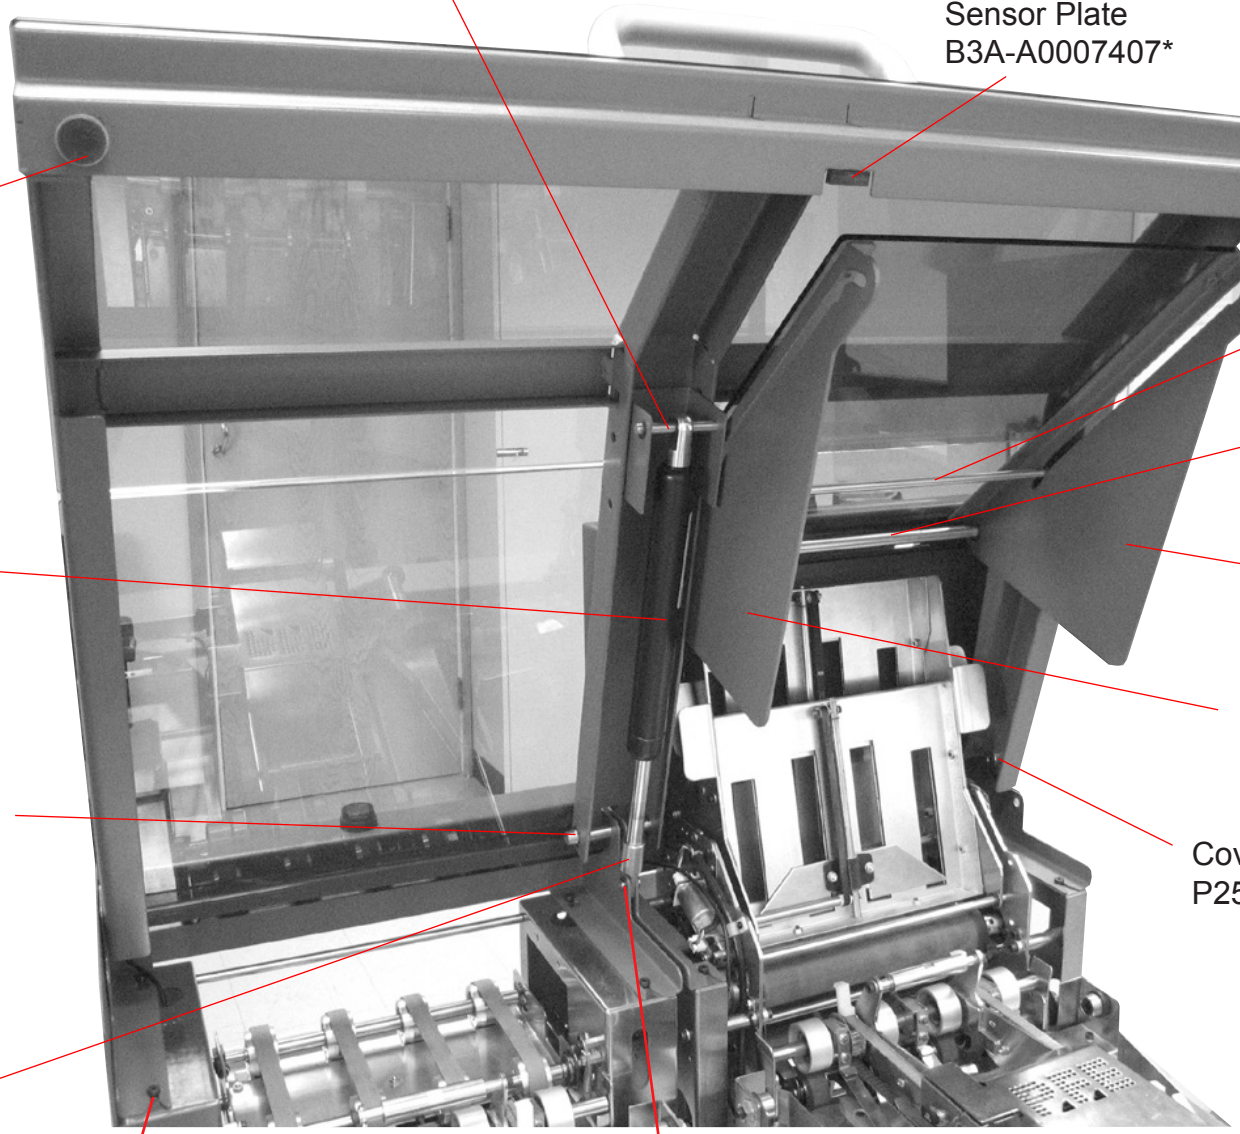

Gas Strut Pivot Long
C4509A

Switch Magnet Small
131-824
Sensor Plate
B3A-A0007407*

* Double sided tape on Sensor Plate to be towards Switch Magnet

Track Cover Assembly
A2-1036-A

Foot Rubber
E0574A x 2
Washer 8.9 Dia
E4-0080-A x 2

Folder Cover Pivot Short
C9769A

Folder Cover Pivot Long
C9768A

Gas Spring 790N
G0169A

Folder Cover LH
R6255S

Folder Cover RH
R6256S

Pivot Long/Short
C3-0769-A/C3-0770-A

Cover Pivot Short
P2538A x 2

Rod End
C4508A

Screw M5 x 12 Cap Head
E2508A x 8

Gas Strut Pivot Short
P2539A

1. See also page 4d-8 for covers closed.
2. See also page 4d-10 for assembly structures.

4d.9 - Feeder & Folder Covers (open)

Feeder/Folder Cover Assembly Structures

Covers for feeder and folder are supplied on a modular basis. The twin-module frame with gas strut etc. is part of the track pair covers. This is then assembled with the required combination of feeder or folder covers, comprising perspex and other parts. Assembly structures are shown below:

TRACK COVER ASSY. A2-1036-A

PART	DESCRIPTION	QTY
A2-1217-A	ROD END ASSY	1
A2-1432-A	TR'K. COVER MID PIVOT ASSY	1
131-824	SWITCH MAGNET SMALL	1
B1912S	FEEDER TRACK COVER ASSY	1
C4509A	GAS STRUT PIVOT LONG	1
E0465A	HANDLE ALUMINIUM	1
E0574A	FOOT SNAP-IN RUBBER	2
E4014A	WASHER 3/8" T3 BZP	2
G0169A	GAS SPRING 790N	1
G7171A	TOP COVER FRONT	1
P2538A	COVER PIVOT SHORT	2
P2539A	GAS STRUT PIVOT SHORT	1
A0007407	SENSOR SUPPORT PLATE	1

FOLDER COVER ASSY. A7424A

PART	DESCRIPTION	QTY
169-112	PCLIP 1/4in	5
181-157	W/D FAN 60MM 24V 2W SM	1
182-487	LOOM ASSY BLUE LIGHT	1
C9768A	FOLDER COVER PIVOT LONG	1
C9769A	FOLDER COVER PIVOT SHORT	1
E0351AUL	ANTI DRUM PAD 0.07	2
G7169A	FOLDER TOP COVER	1
R6254S	FOLDER COVER SUPPORT	1
R6255S	FOLDER COVER LH	1
R6256S	FOLDER COVER RH	1
E1-0145-A	BEARING SLIDE 8 x 11 x 7	2

Covers for feeder consist of 2 levels: A7428A includes mounting items and also further assembly A2-1035-A, which consists of cover items.

FEEDER COVERS ASSY. A7428A

PART	DESCRIPTION	QTY
A2-1035-A	FEEDER COVER ASSEMBLY	1
B7284W	FEEDER BACK PANEL	1
B8275P	SUPPORT LEG LH	1
B8276P	SUPPORT LEG RH	1

FEEDER COVER ASSY. A2-1035-A

PART	DESCRIPTION	QTY
169-112	PCLIP 1/4in	3
181-157	W/D FAN 60MM 24V 2W SM	1
182-487	LOOM ASSY BLUE LIGHT	1
G7170A	TOP COVER BACK	1
R6262S	FEEDER COVER SUPPORT	1

ROD END ASSY. A2-1217-A

PART	DESCRIPTION	QTY
C4508A	ROD END	1
E1061A	BEARING BALL 8 x 16 x 5mm	1

TRK. COVER MID PIVOT ASSY. A2-1432-A

PART	DESCRIPTION	QTY
C2-1247-A	BEARING HOUSING	2
C3-0769-A	PIVOT LONG	1
C3-0770-A	PIVOT SHORT	1
E1061A	BEARING BALL 8 x 16 x 5mm	2
E2557A	SCREW M5 SKT CAP HD x 35	1

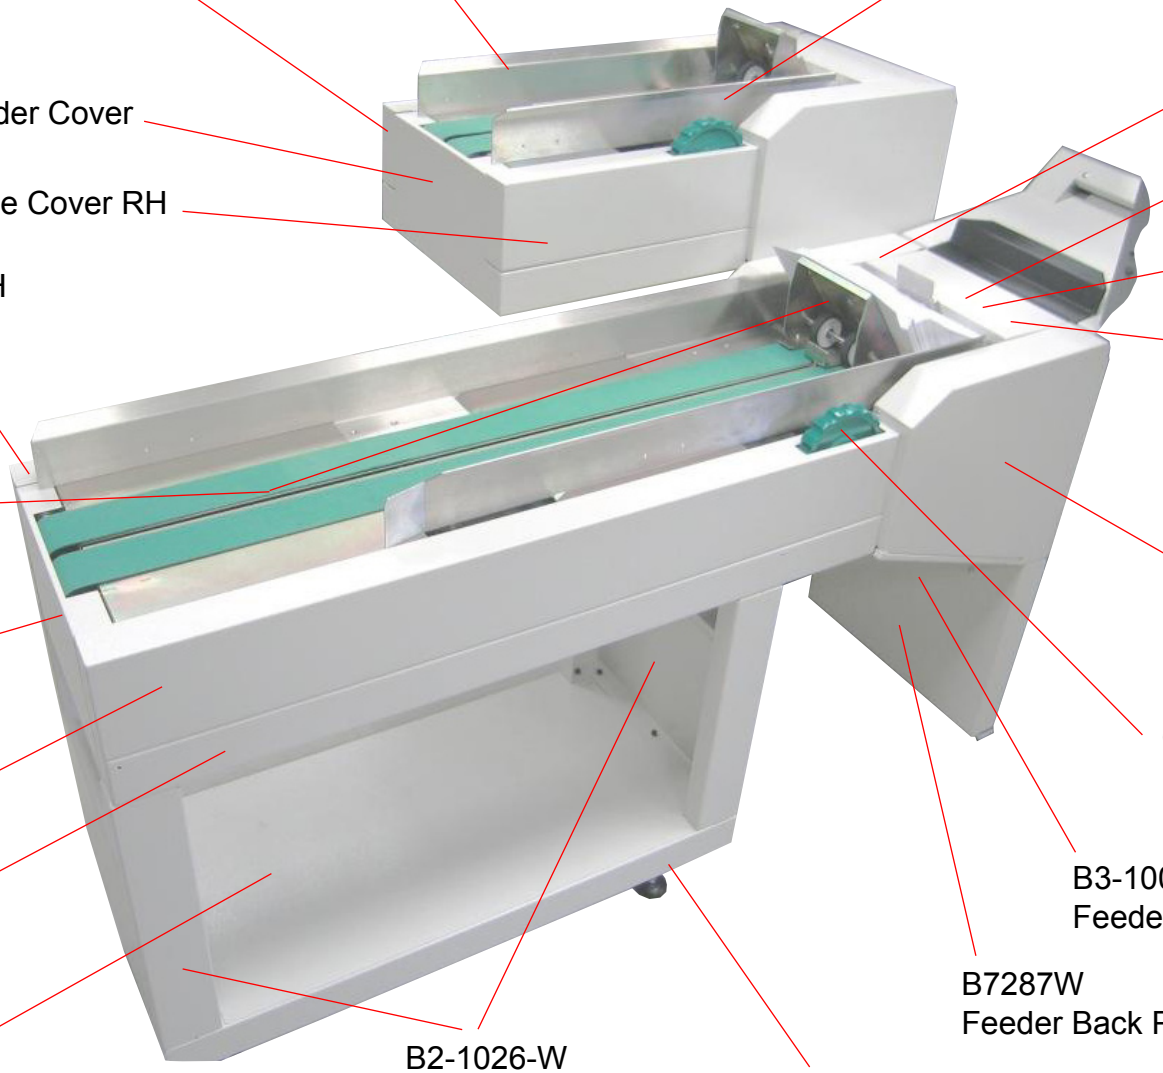

B3-1009-W
Conveyor Side Cover LH

B2-1016-A
Side Guide LH
(Long = B2-1029-A)

B2-1017-A
Side Guide RH
(Long = B2-1030-A)

B3-1002-W
Feeder Side Cover LH
(Std. & Long Feeders)

B3-1008-W
Conveyor Under Cover

B3-1010-W
Conveyor Side Cover RH

G3068A
Warning Plate

131-824
Switch Magnet Small

B3-1013-W
Long Conv Side Cover LH

B2-1023-W
Stand Top Frame LH

B3-1000-W
Feeder Top Cover
C2-1000-A
Cover Pivot
(Std. & Long Feeders)

A2-1009-A
Back Guide Assy
C7336A Slider

B3-1003-W
Feeder Side Cover RH
(Std. & Long Feeders)

B3-1014-W
Long Conv Under Cover

C2-1002-V
Hand Wheel
(Std. & Long Feeders)

B3-1012-W
Long Conv Side Cover RH

B3-1001-W
Feeder under cover

B2-1024-W
Stand Top Frame RH
(LH = B2-1023-W)

B7287W
Feeder Back Panel

B3-1011-W
Stand Cover

B2-1026-W
Stand End Frame Insert
B2-1027-W
Stand End Frame Env

B4-0431-W
Stand Bottom PLT Assy
E0301A Foot x 4

See following page
for flatbed feeder.

4d.11 - Feeder Conveyor Covers

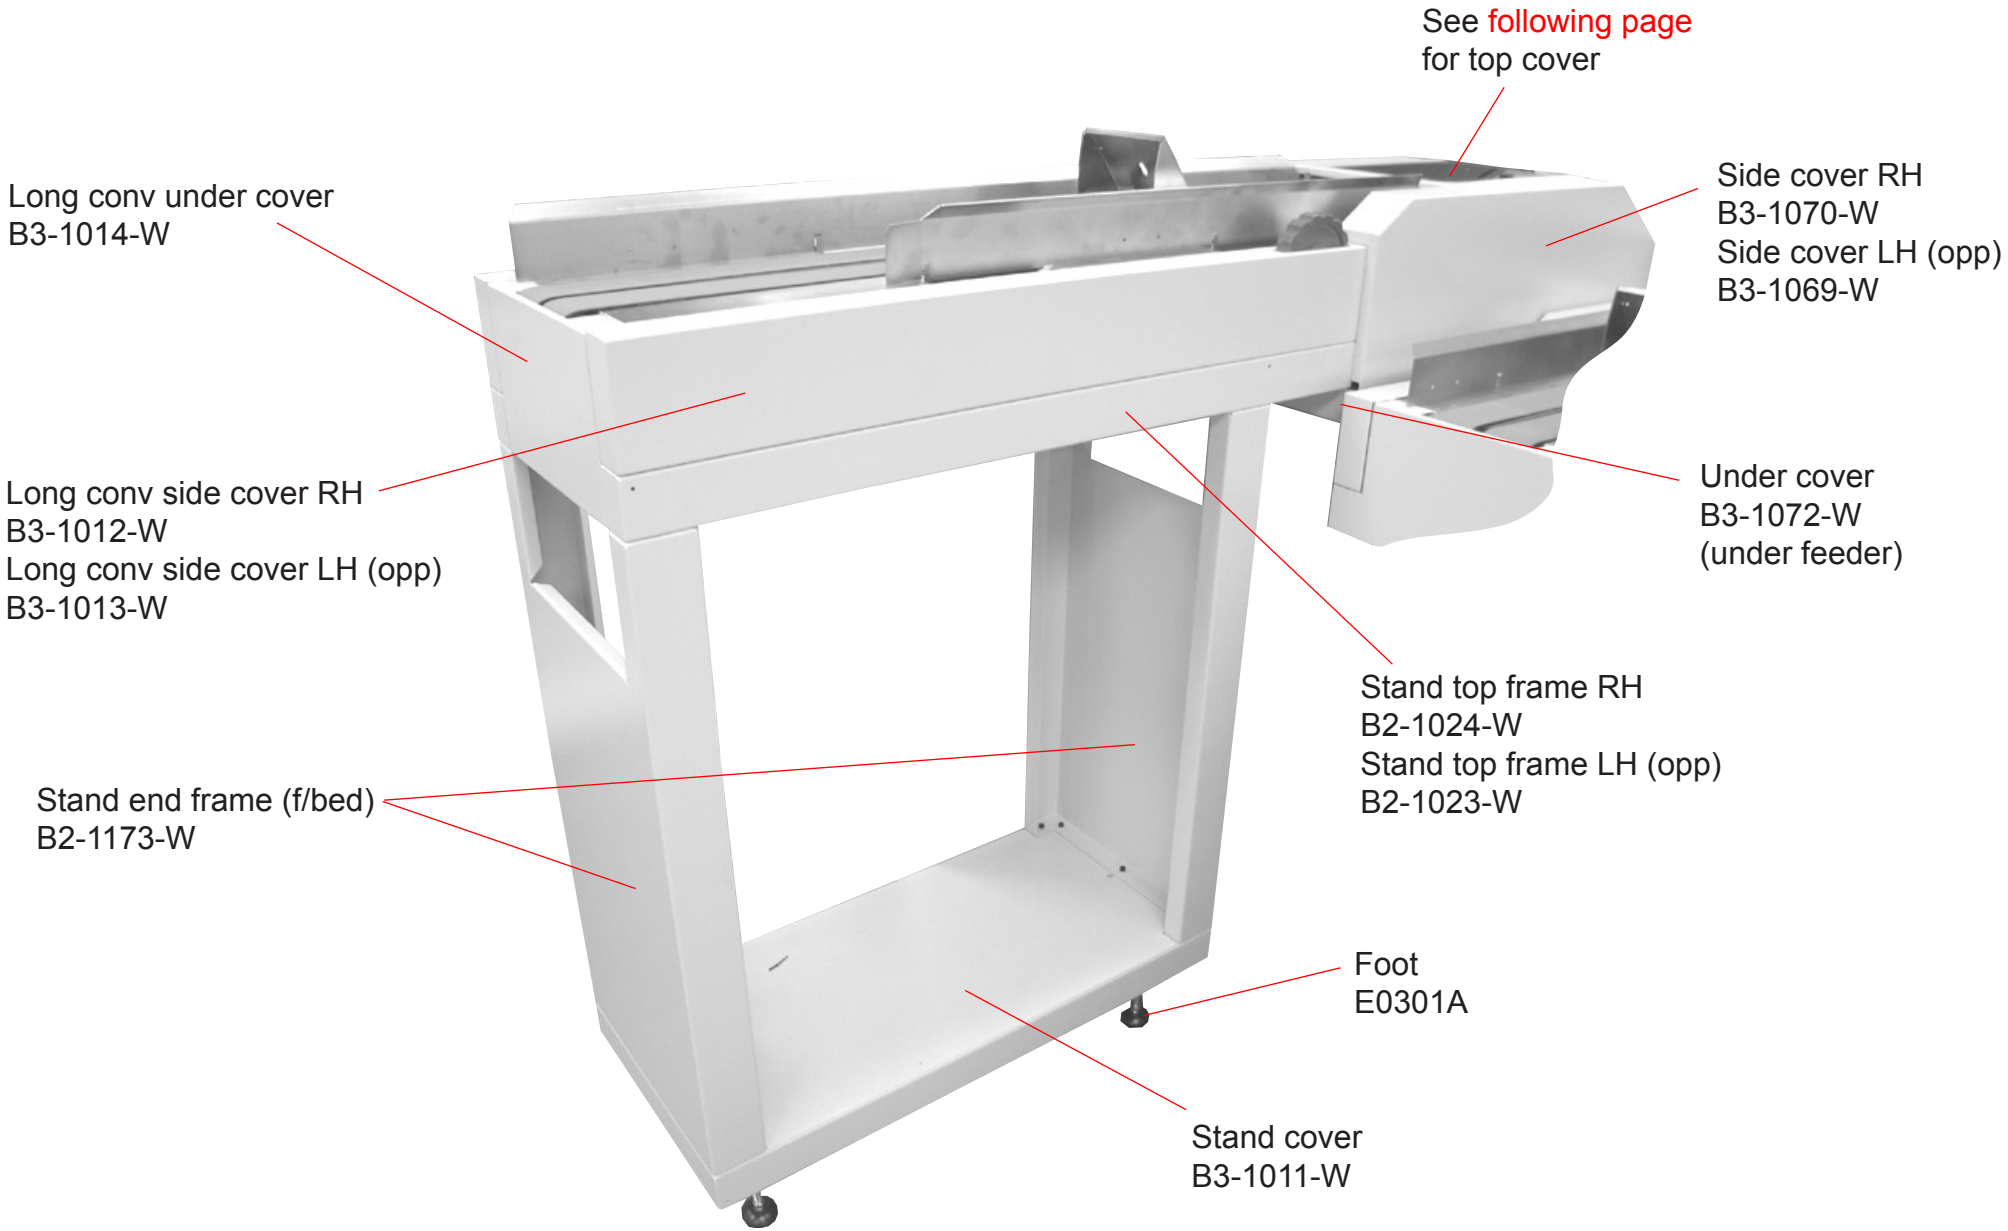

4d.12 - Flat Material Feeder Covers

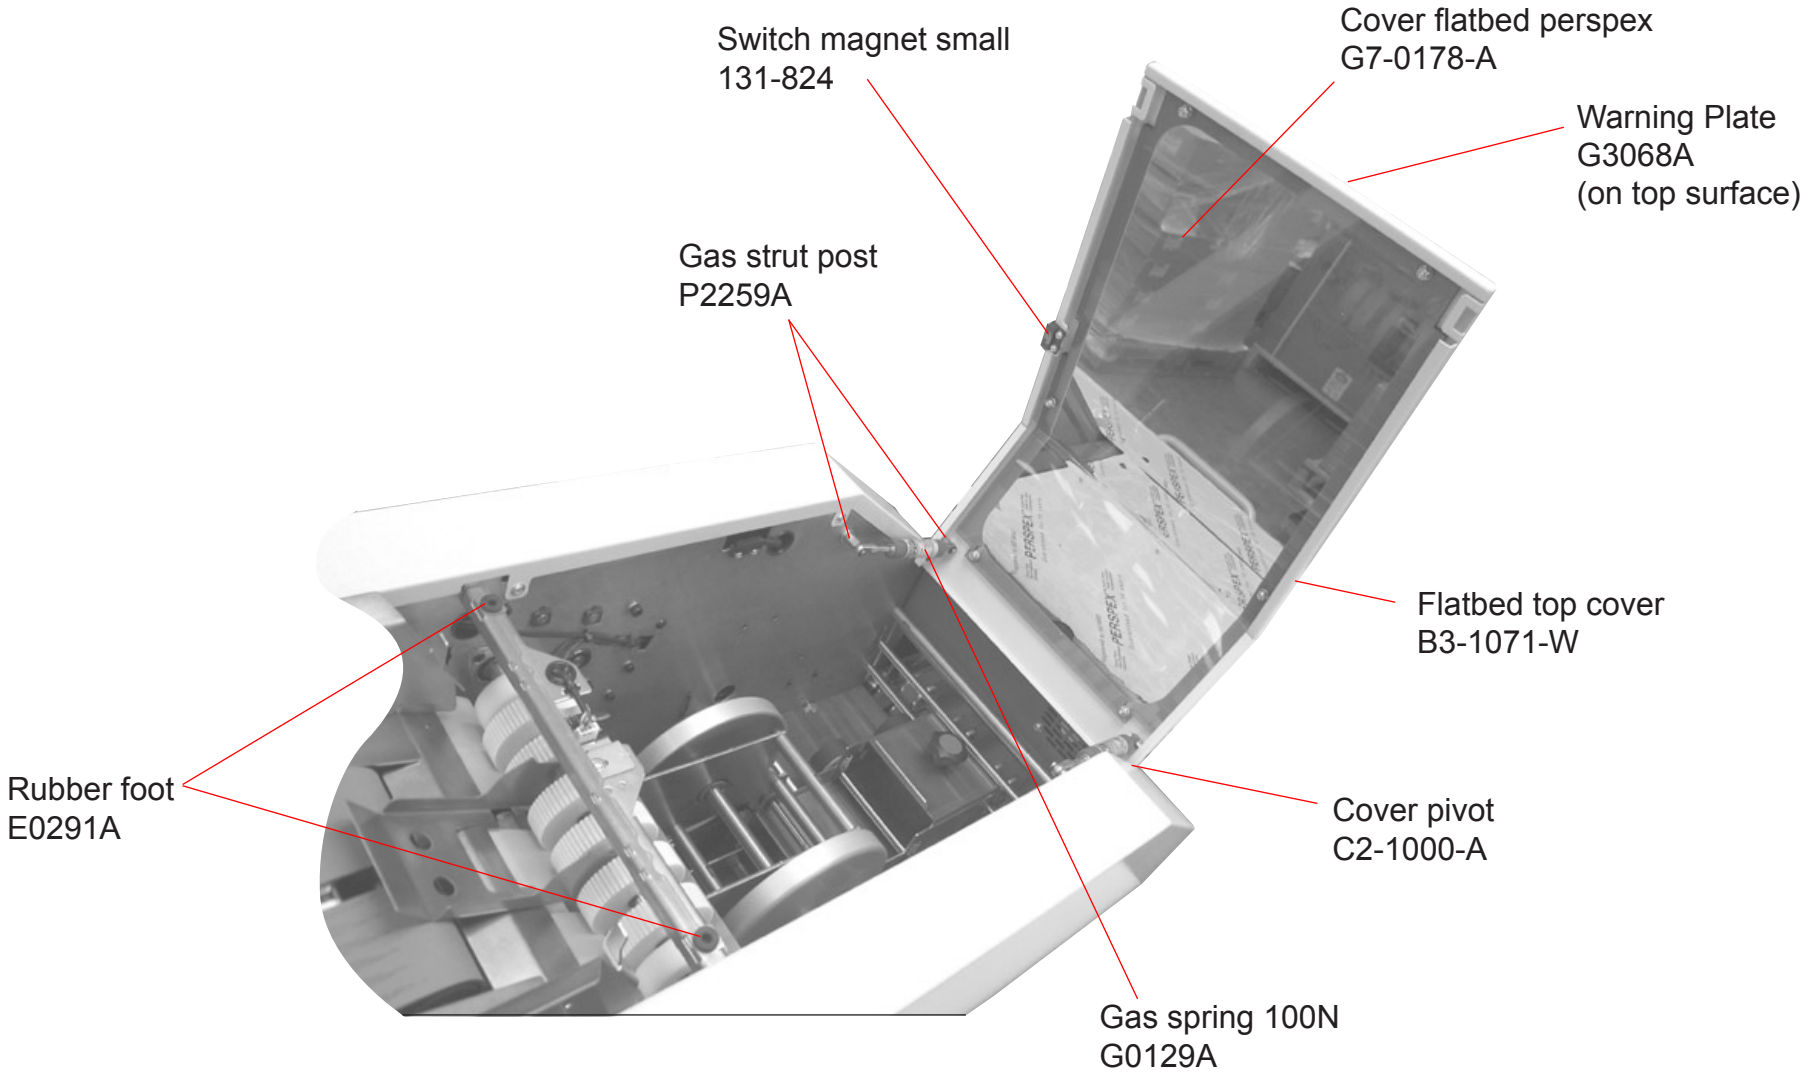

4d.13 - Flat Material Feeder Covers (open)

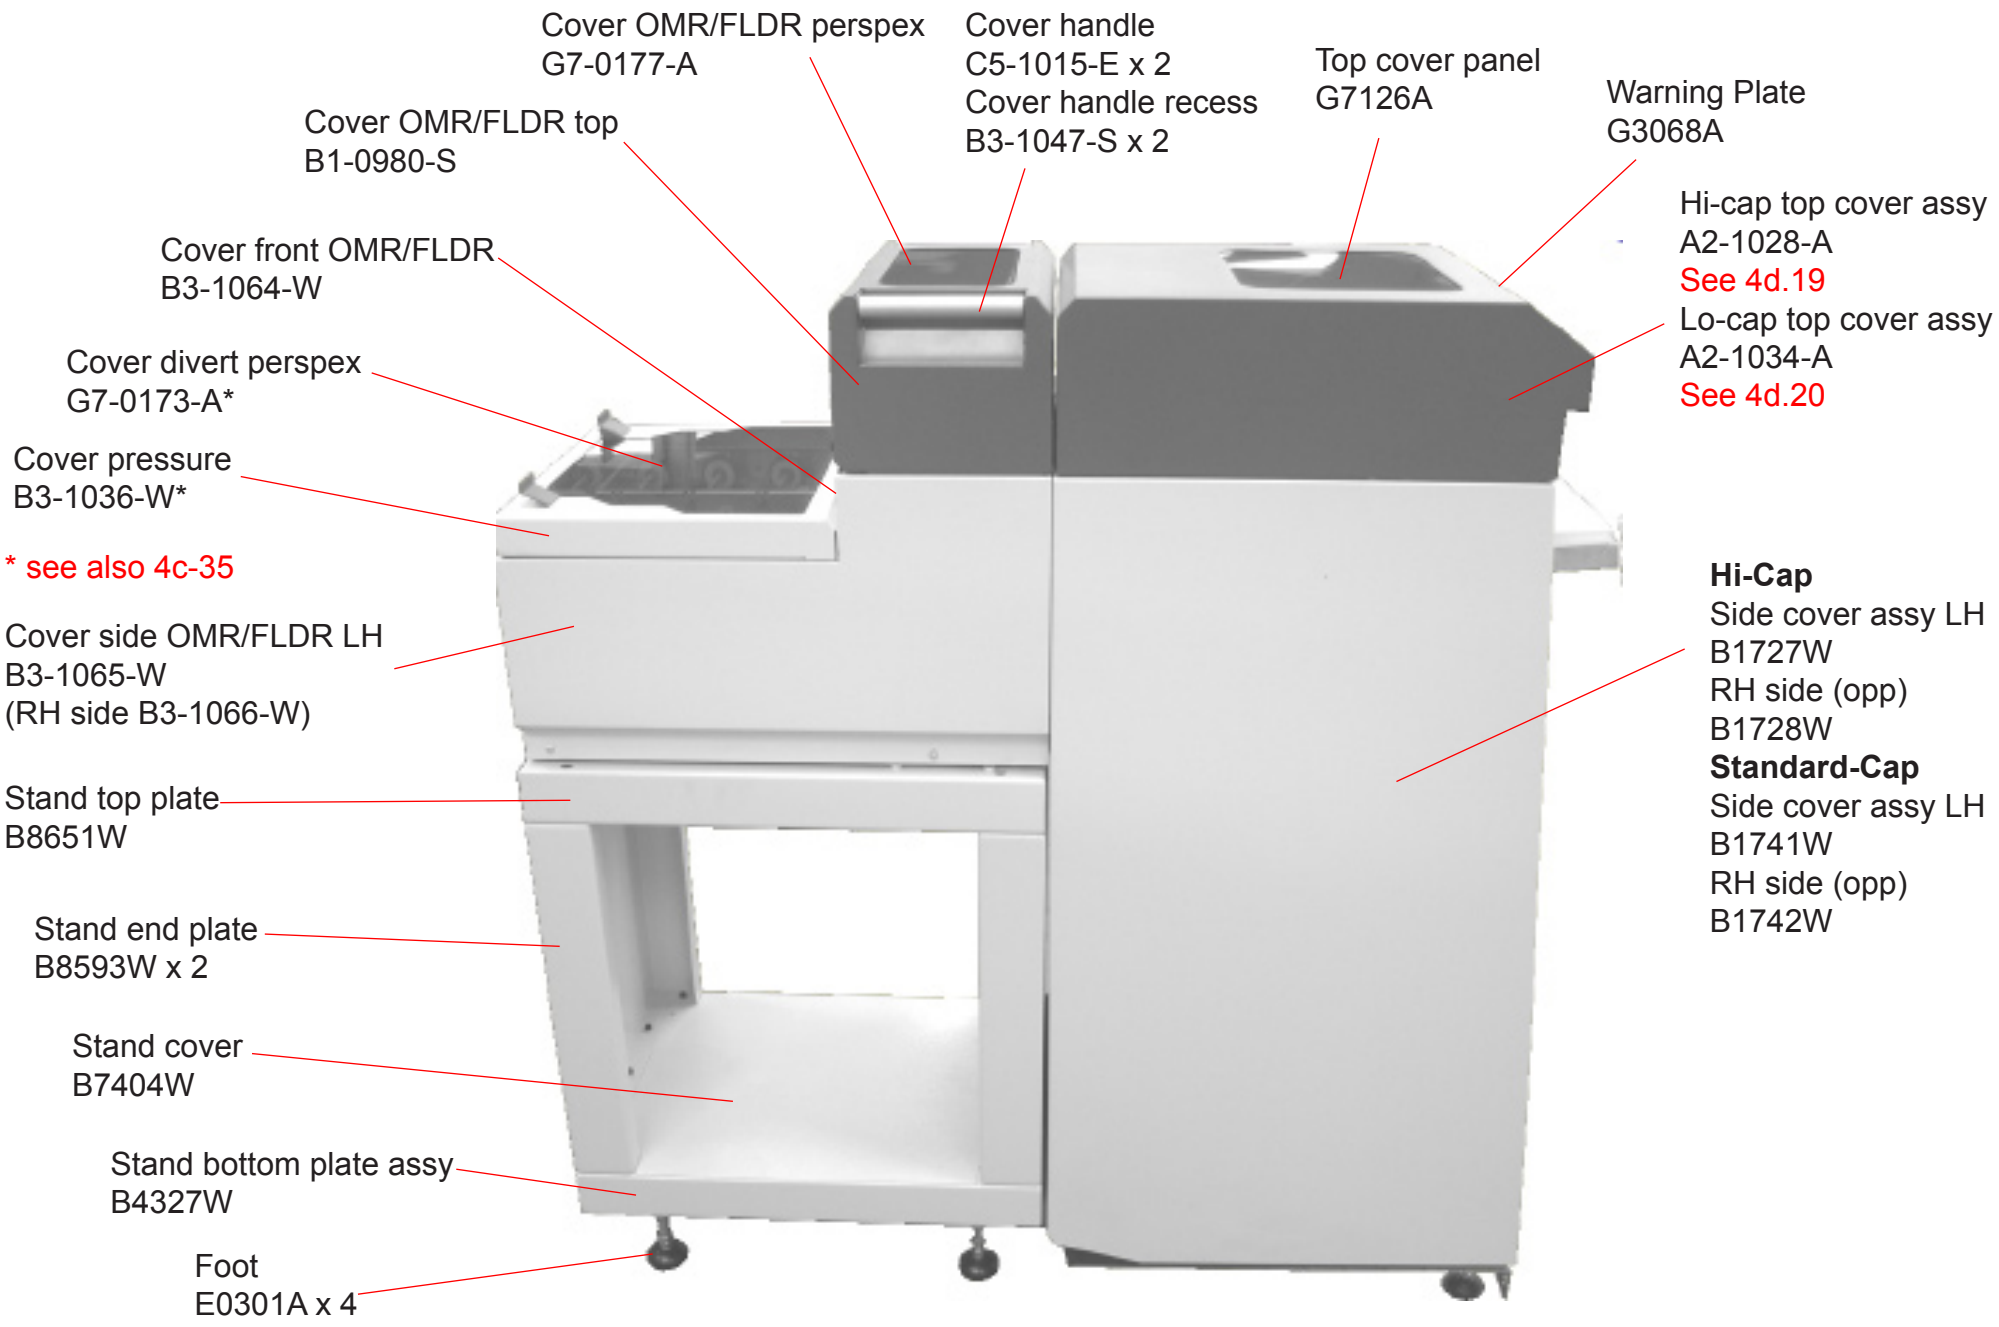

4d.14 - OMR/Barcode Folder Covers

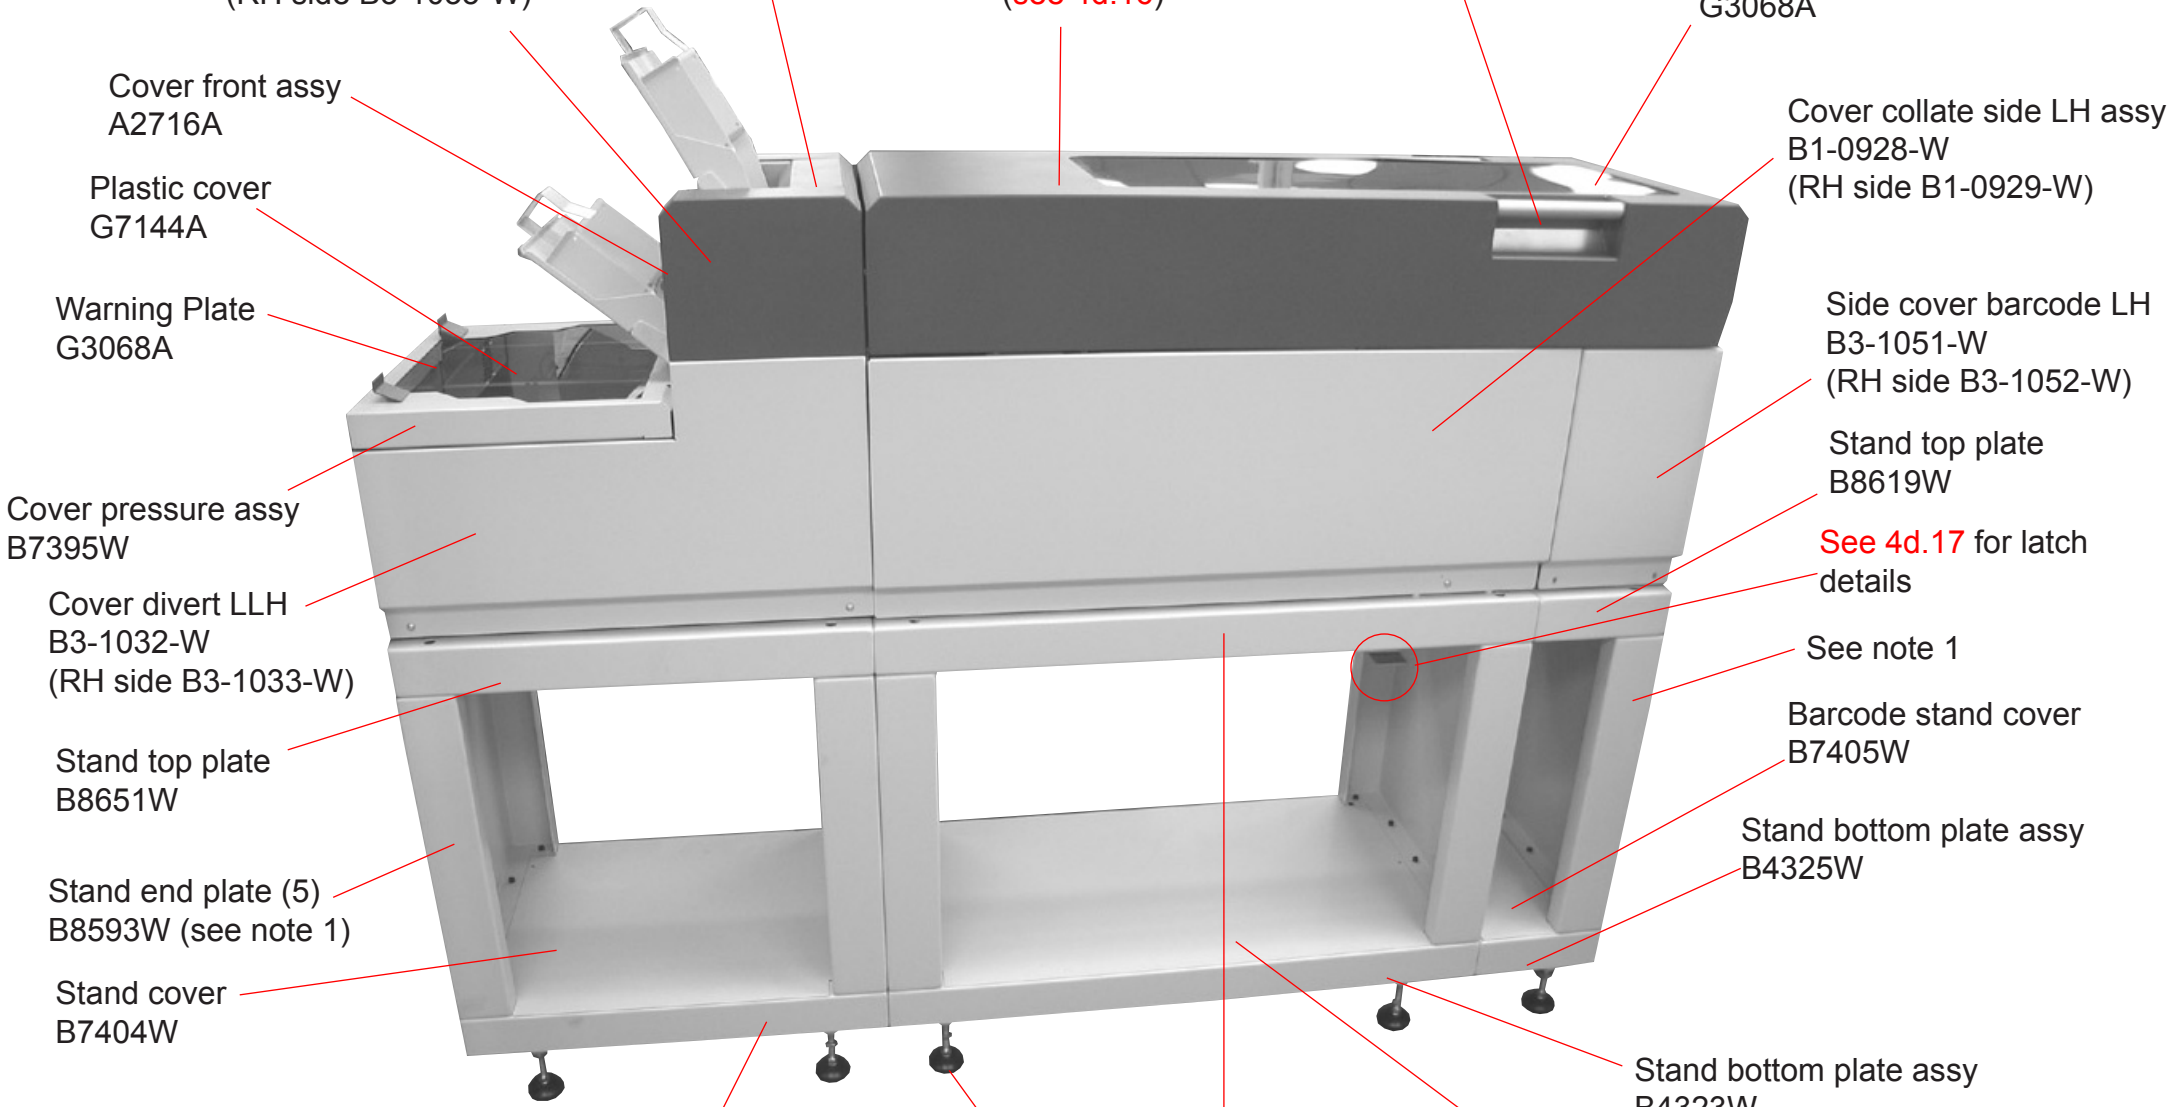

Notes:
1. When 2nd monitor is used, part no. B2-1462-W in indicated position only

4d.15 - Collator/Diverter Covers

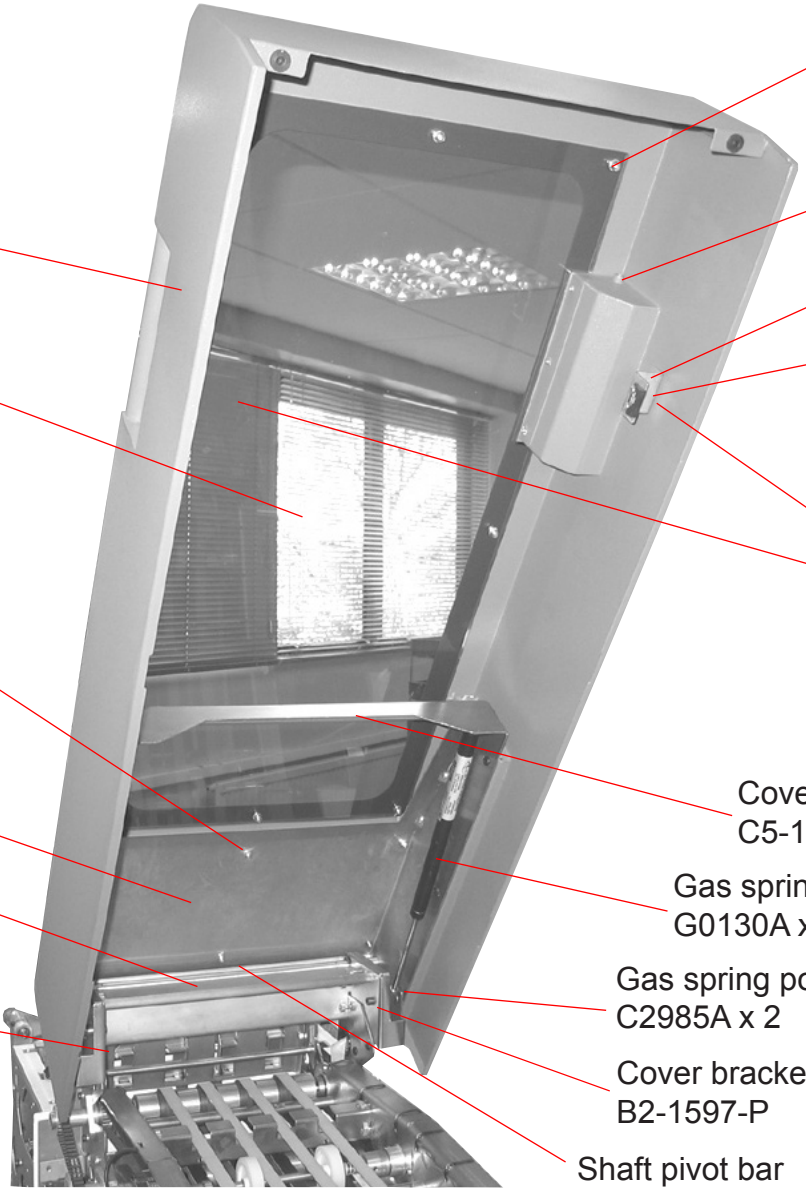

M4 Nyloc Nut E3505A x 12
M4 Washer Form A E4011A x 12

M4 Full Nut E3502A x 4
M4 Washer Form A
E4011A x 4

Cover stop eccentric C2-1142-A
Eject Roller D0012A

Switch Magnet Small 131-824
Sensor bracket B2-1600-A

Collate cover assy
B1-0972-S

Top cover collate G7168A (perspex)
Note:- When the Autoread Camera System is fitted the alternative top cover G7-0185-A (perspex) is to be used instead.

Cover Stop Eccentric x 2
C2-1142-A
Eject Roller x 2
D0012A
M4 x 20mm Cap Hd Screw
E2513A x 2
M4 Washer Form A
E4011A x 2

M5 x 10mm Cap Hd Screw x 10 E2516A
M5 Washer Form A x 10 E4012A

Support bracket Assy
B1-0974-P

Cover strut bar
C5-1152-A

Strengthening bridge
B2-1599-P

Gas spring 95mm-340
G0130A x 2

Cover bracket LH
B2-1598-P

Gas spring post
C2985A x 2

Cover bracket RH
B2-1597-P

Shaft pivot bar
C5-1151-A

See also previous page for cover closed

4d.16 - Collator Top Cover Assy A2-1033-A (open)

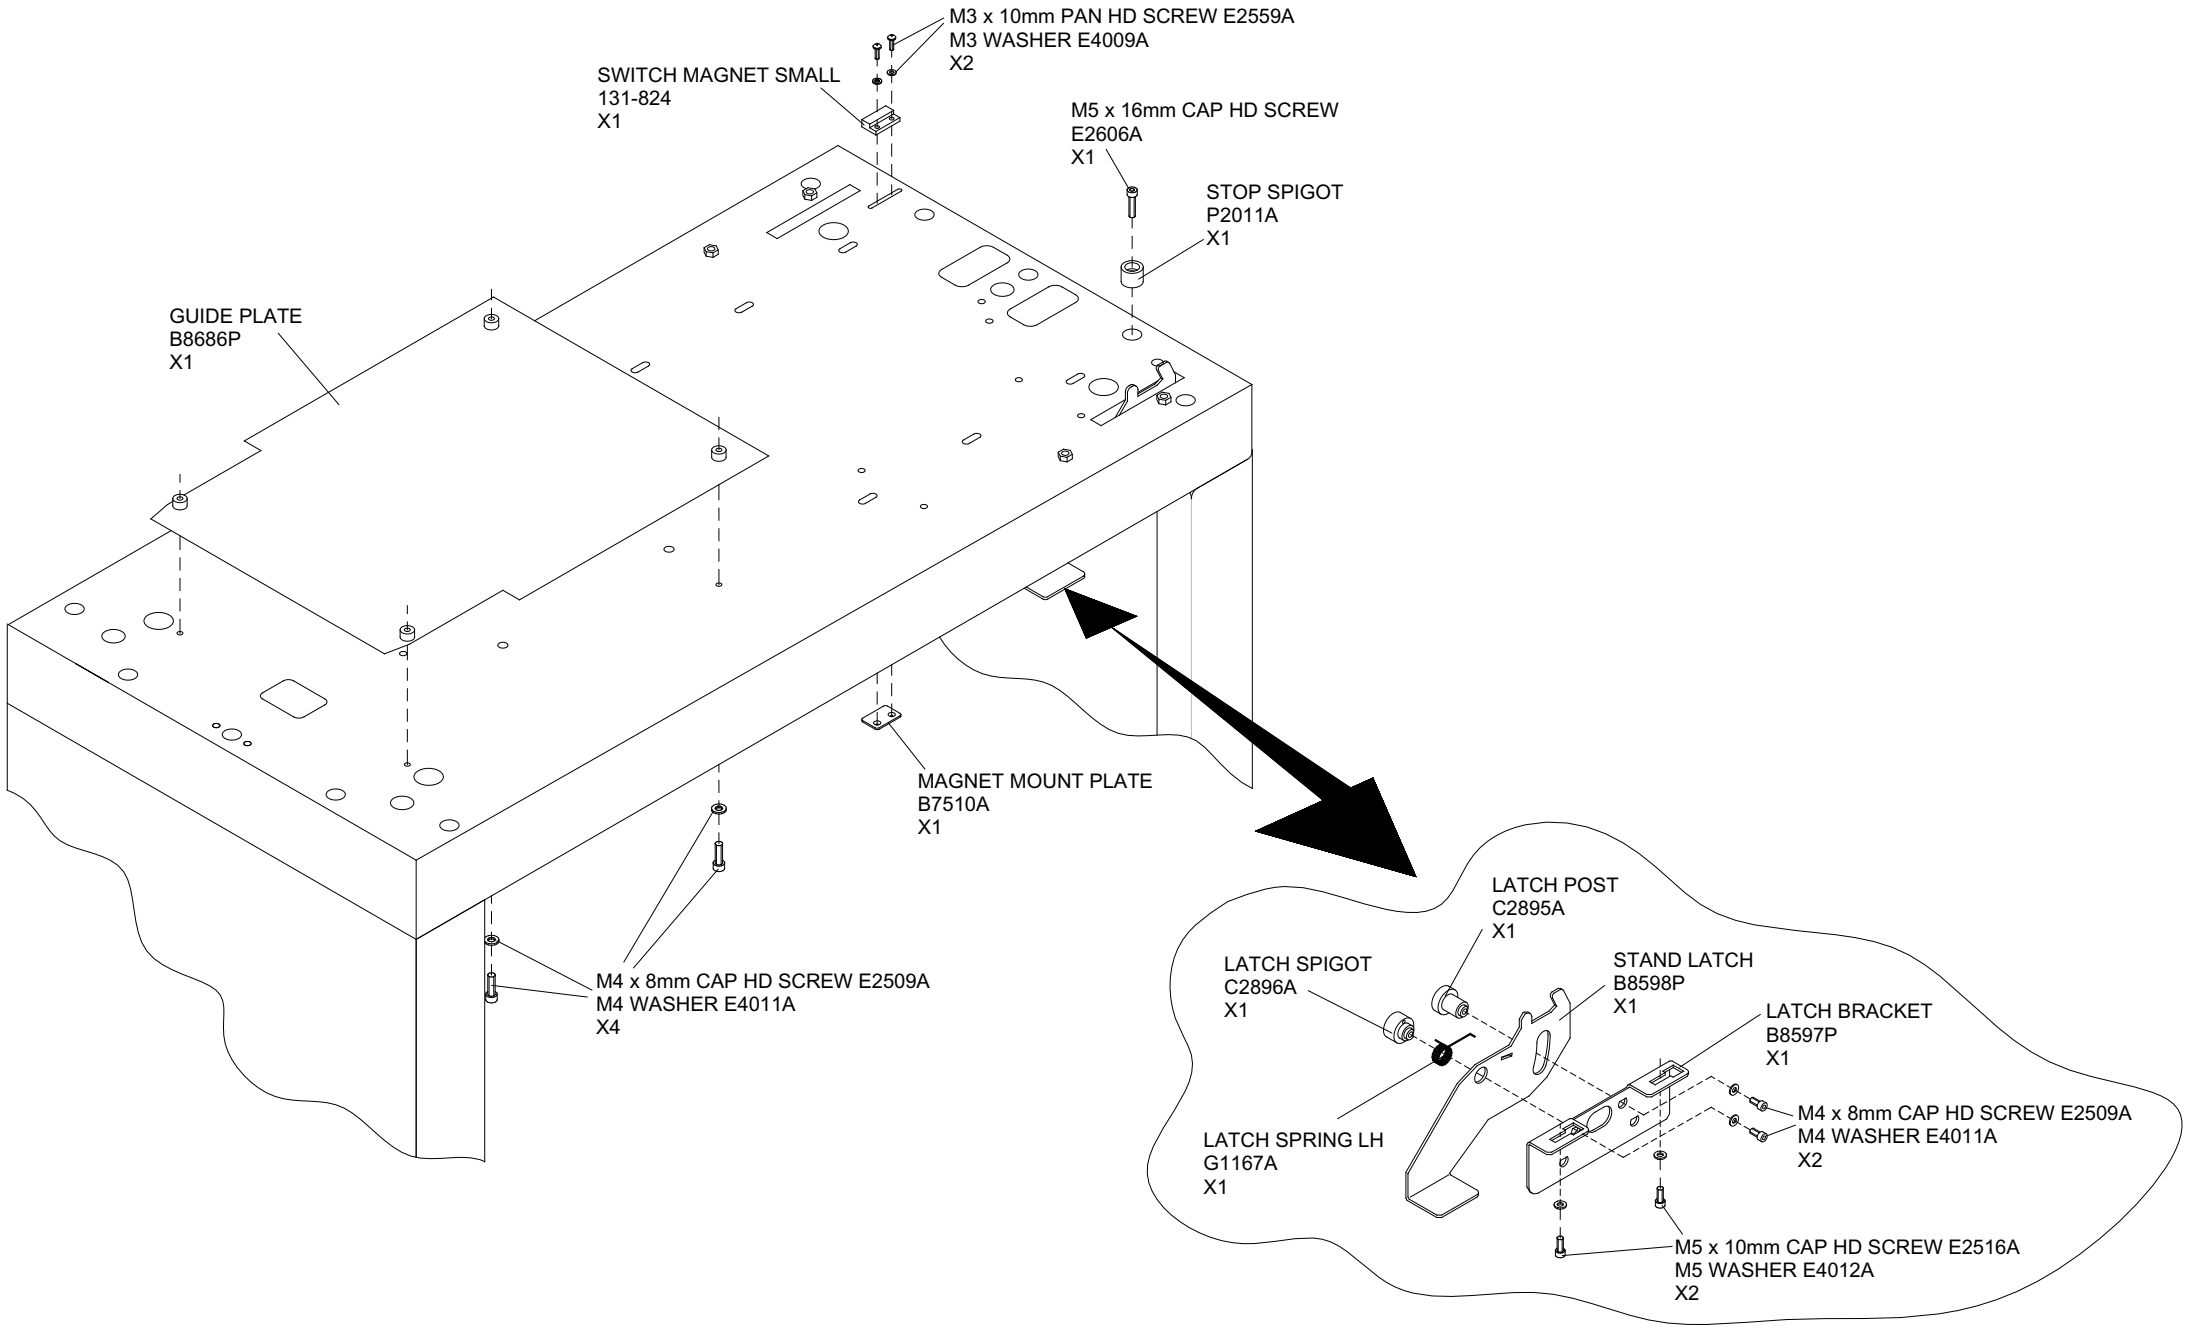

4d.17 - Collator Latch

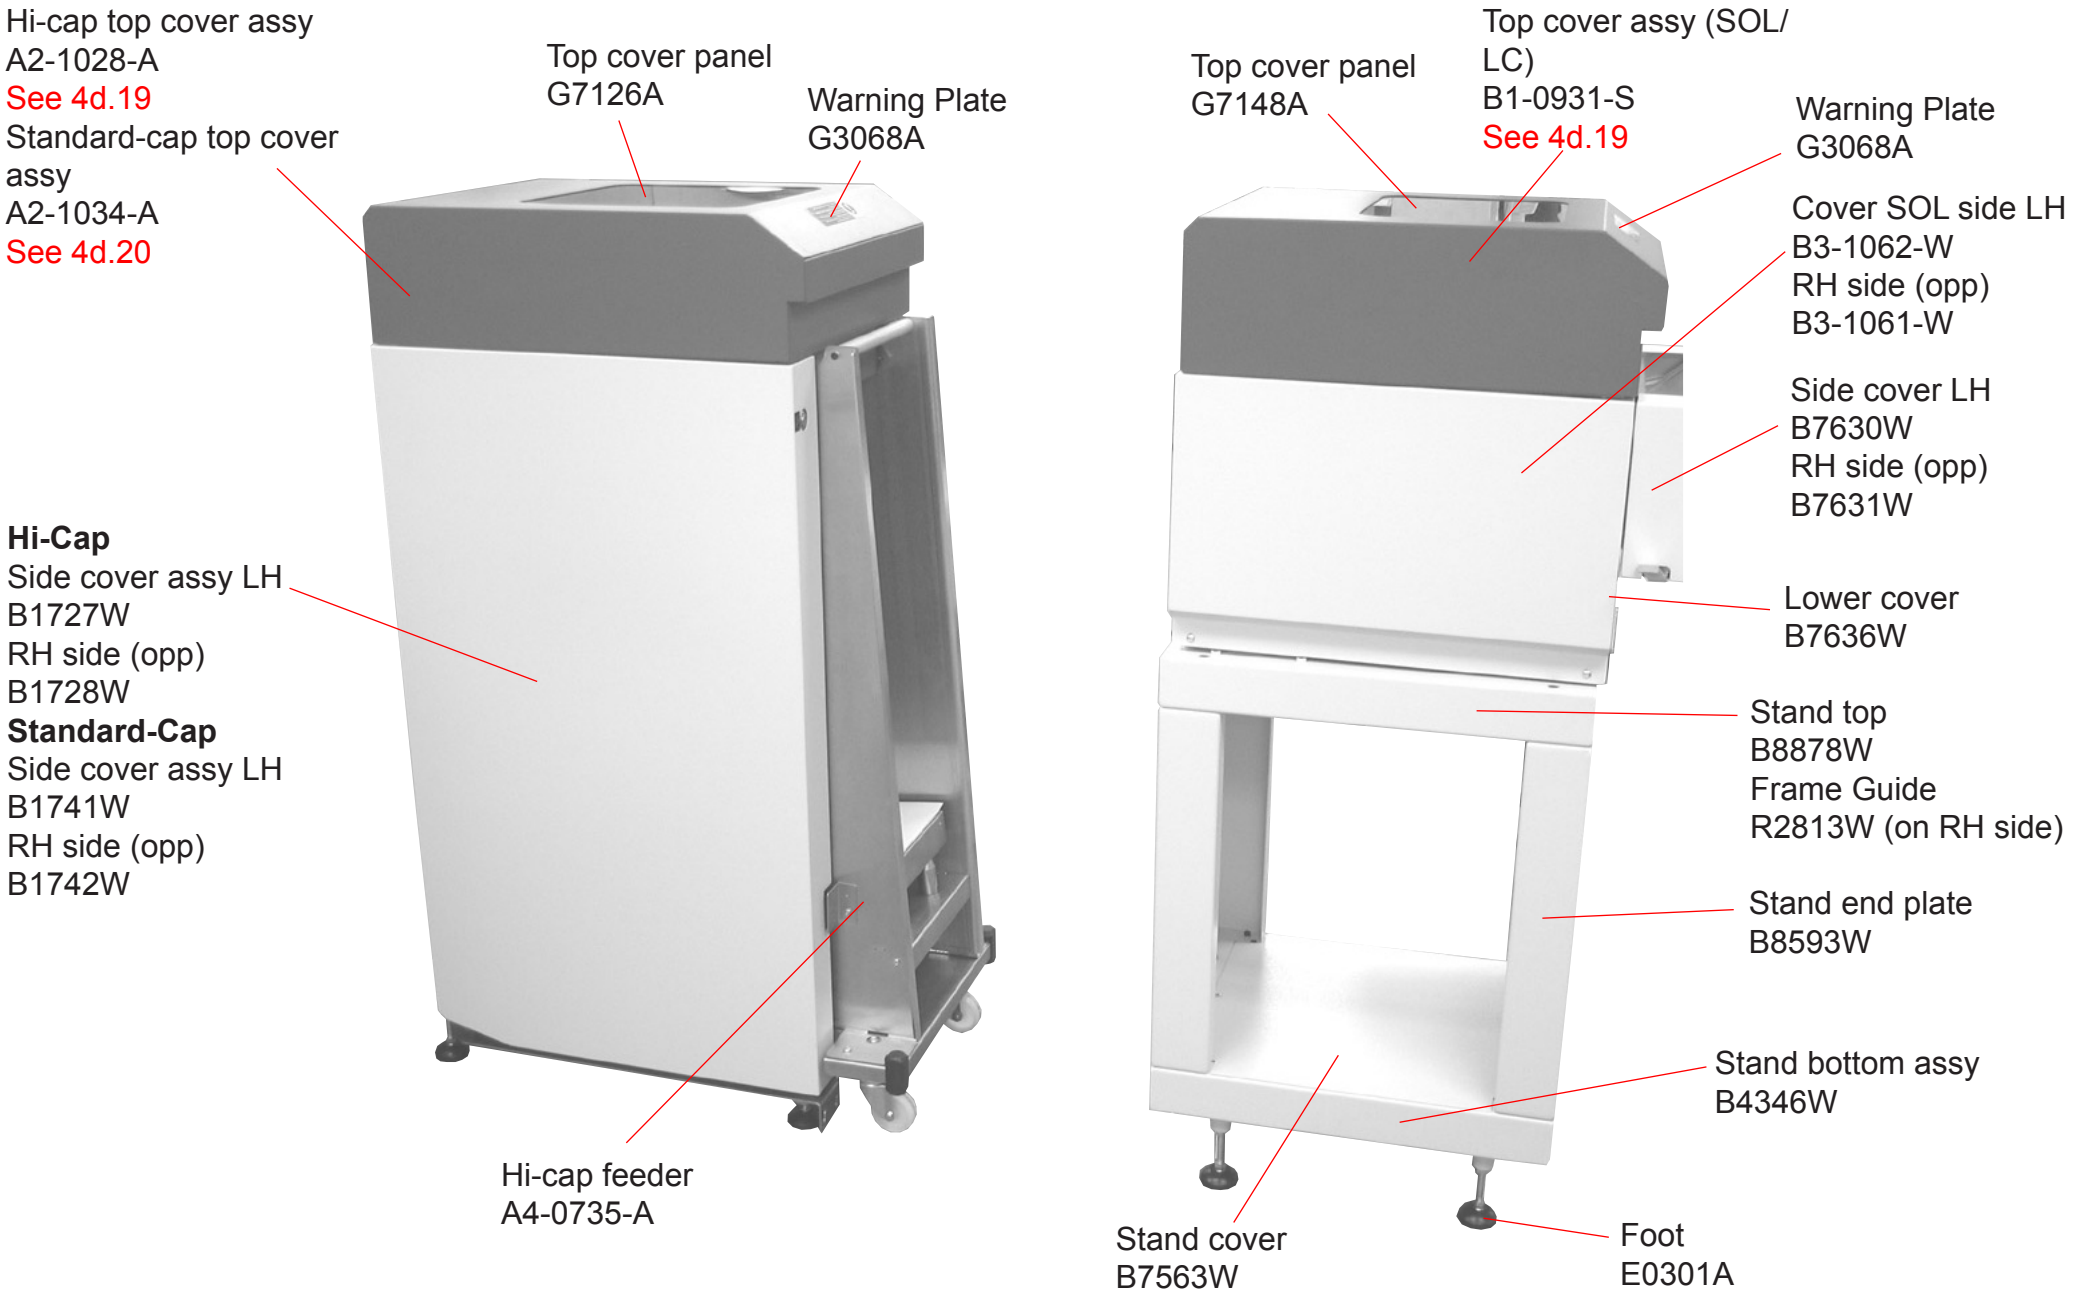

4d.18 - Hi-Cap/Standard-Cap Feeder & Single OL Interface Covers

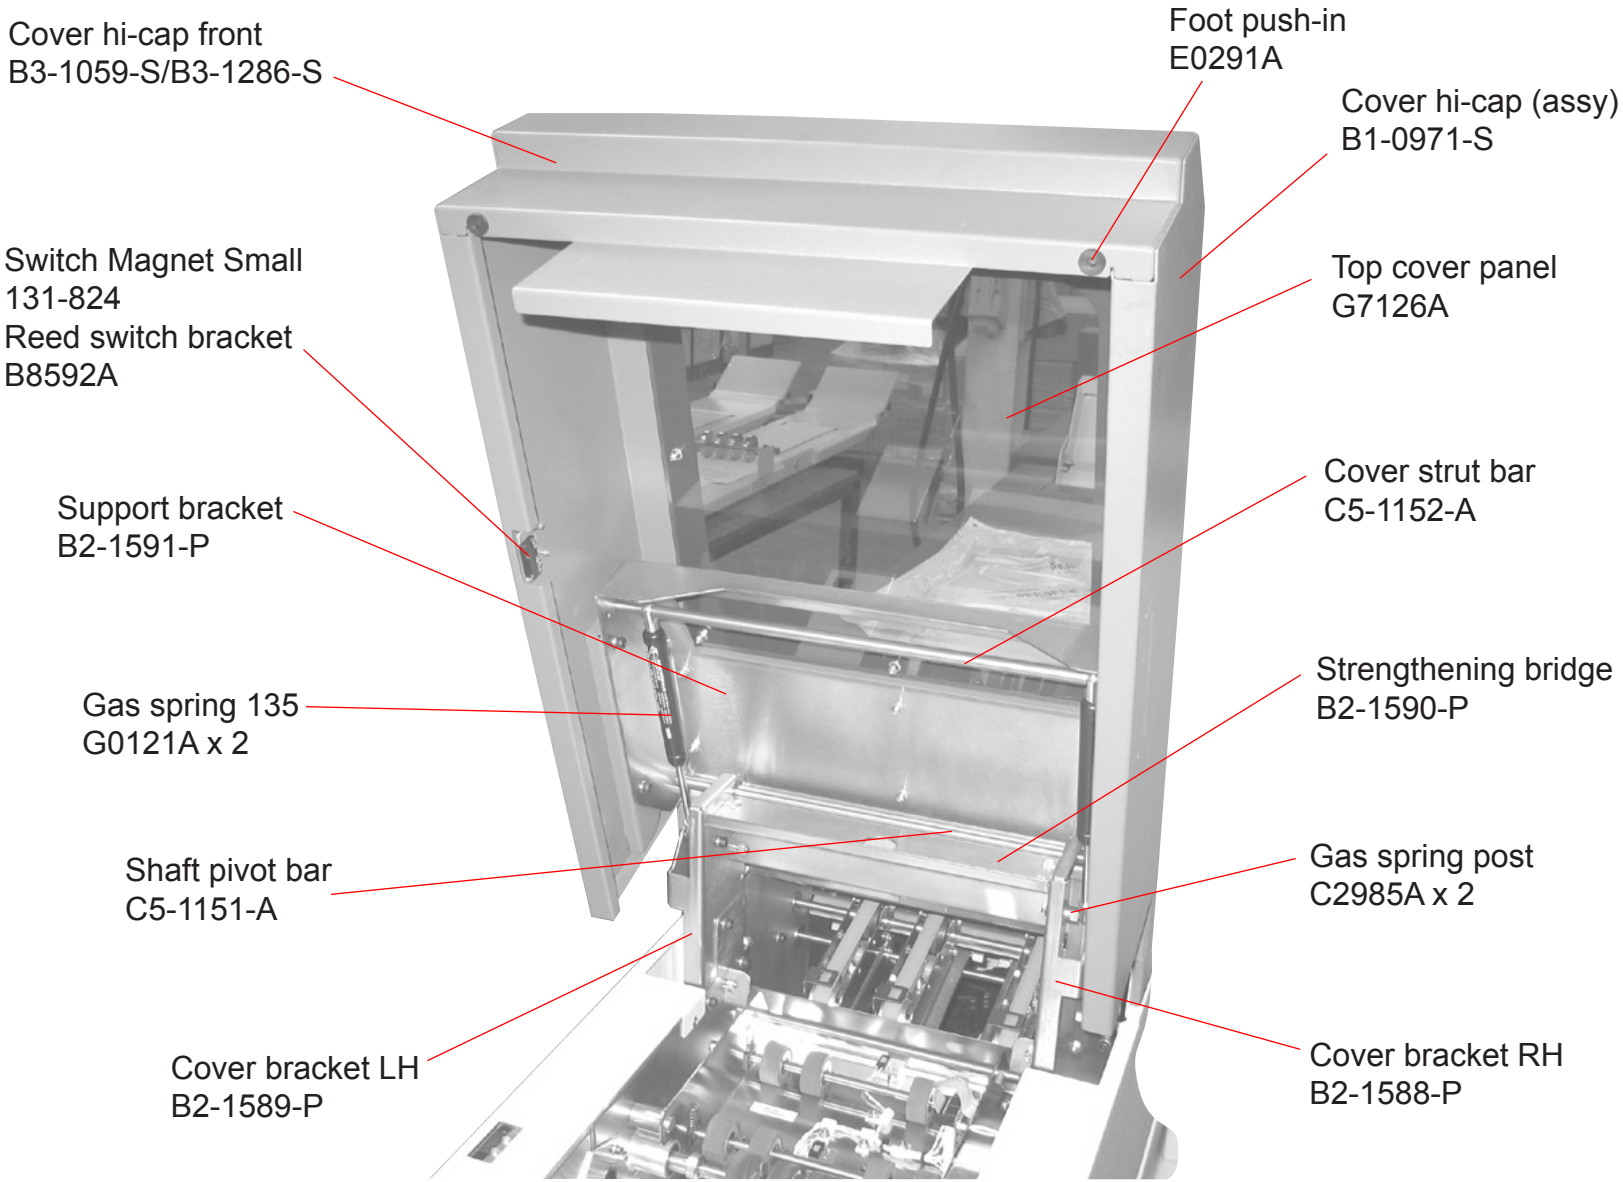

4d.19 - Hi-Cap Feeder Top Cover A2-1028-A (open)

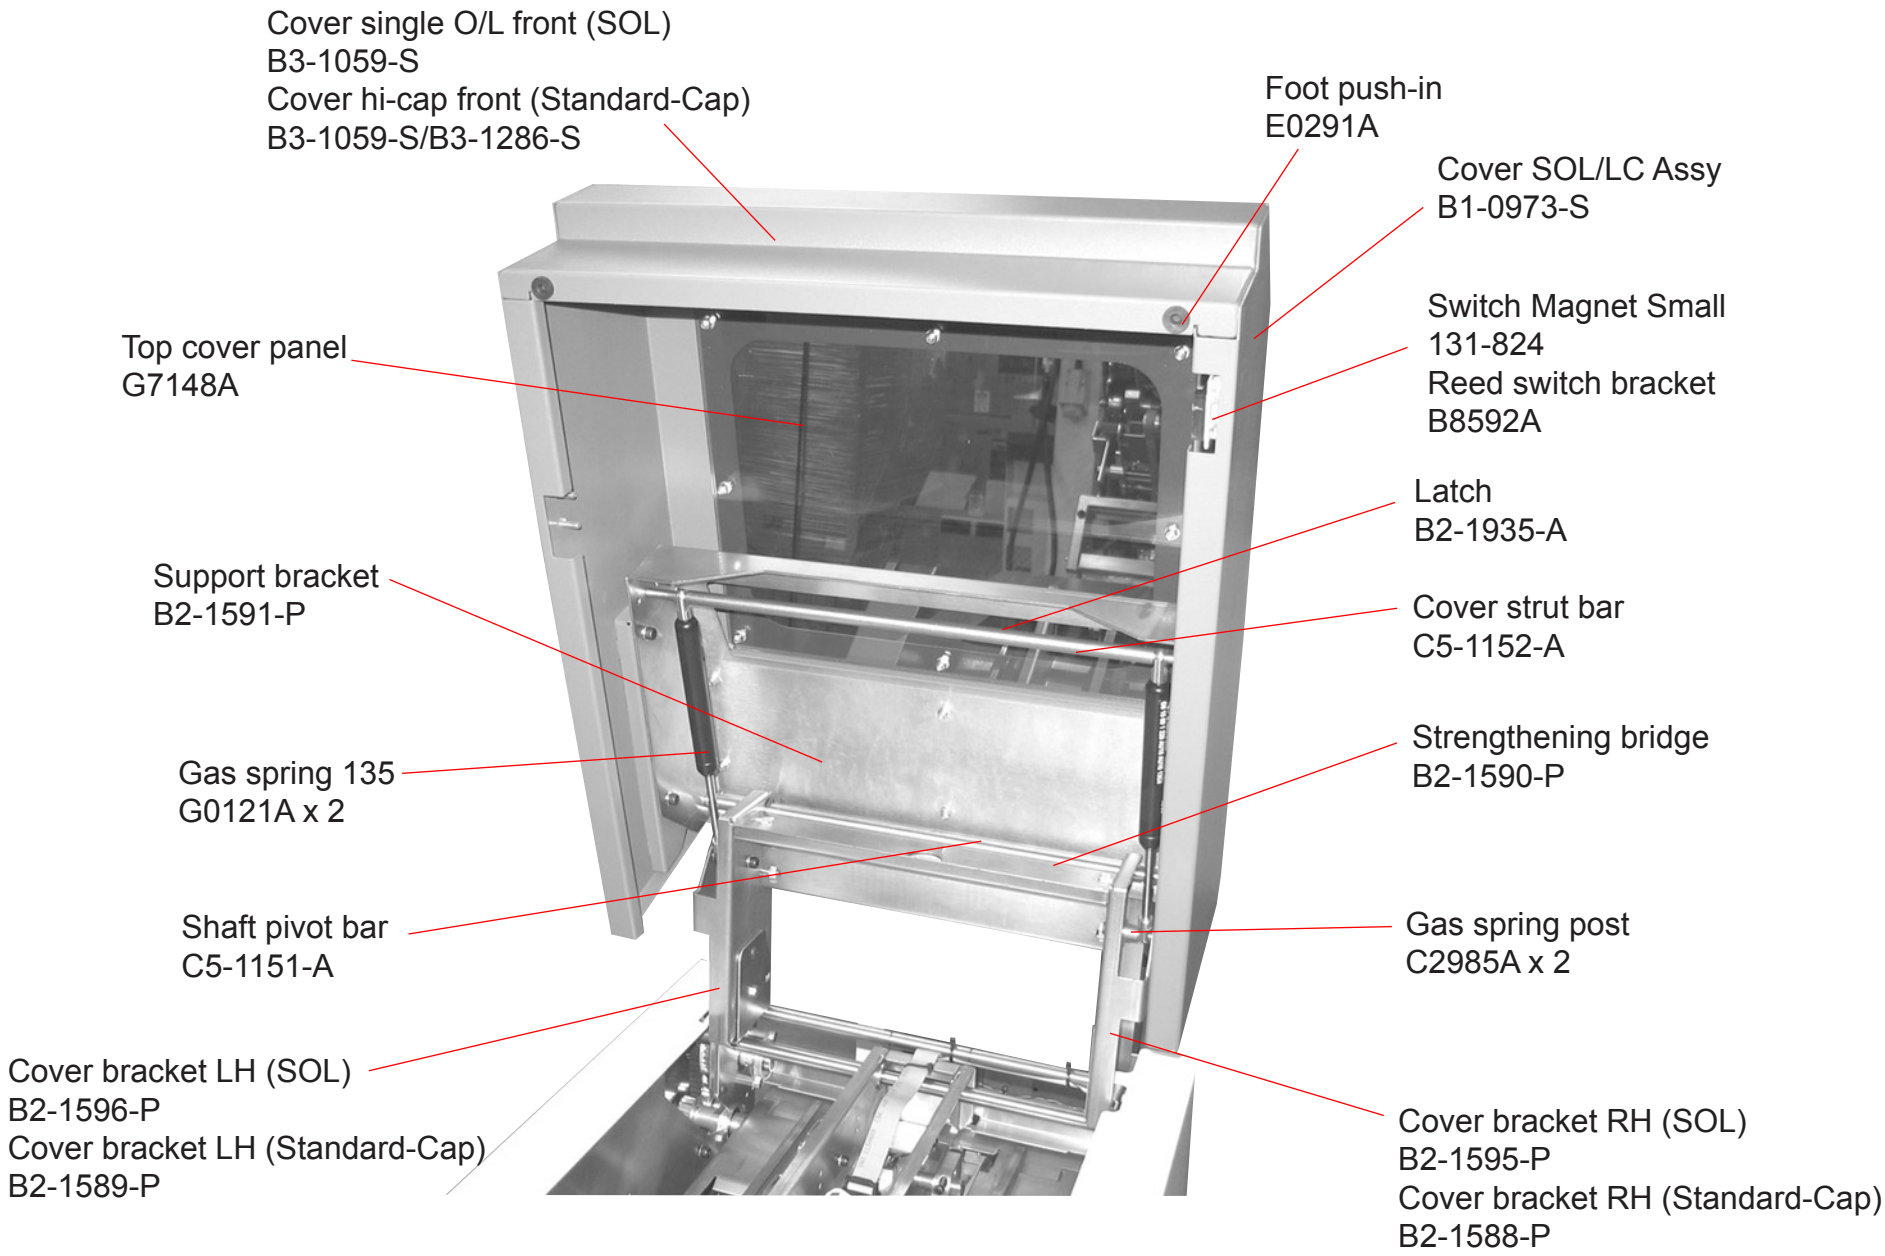

4d.20 - Single OL Top Cover Assy. A2-1047-A/Standard-Cap Top Cover Assy. A2-1034-A (open)

For Vertical Stacker cover identities, see section 4j.9

4d.21 - Vertical Stacker Covers

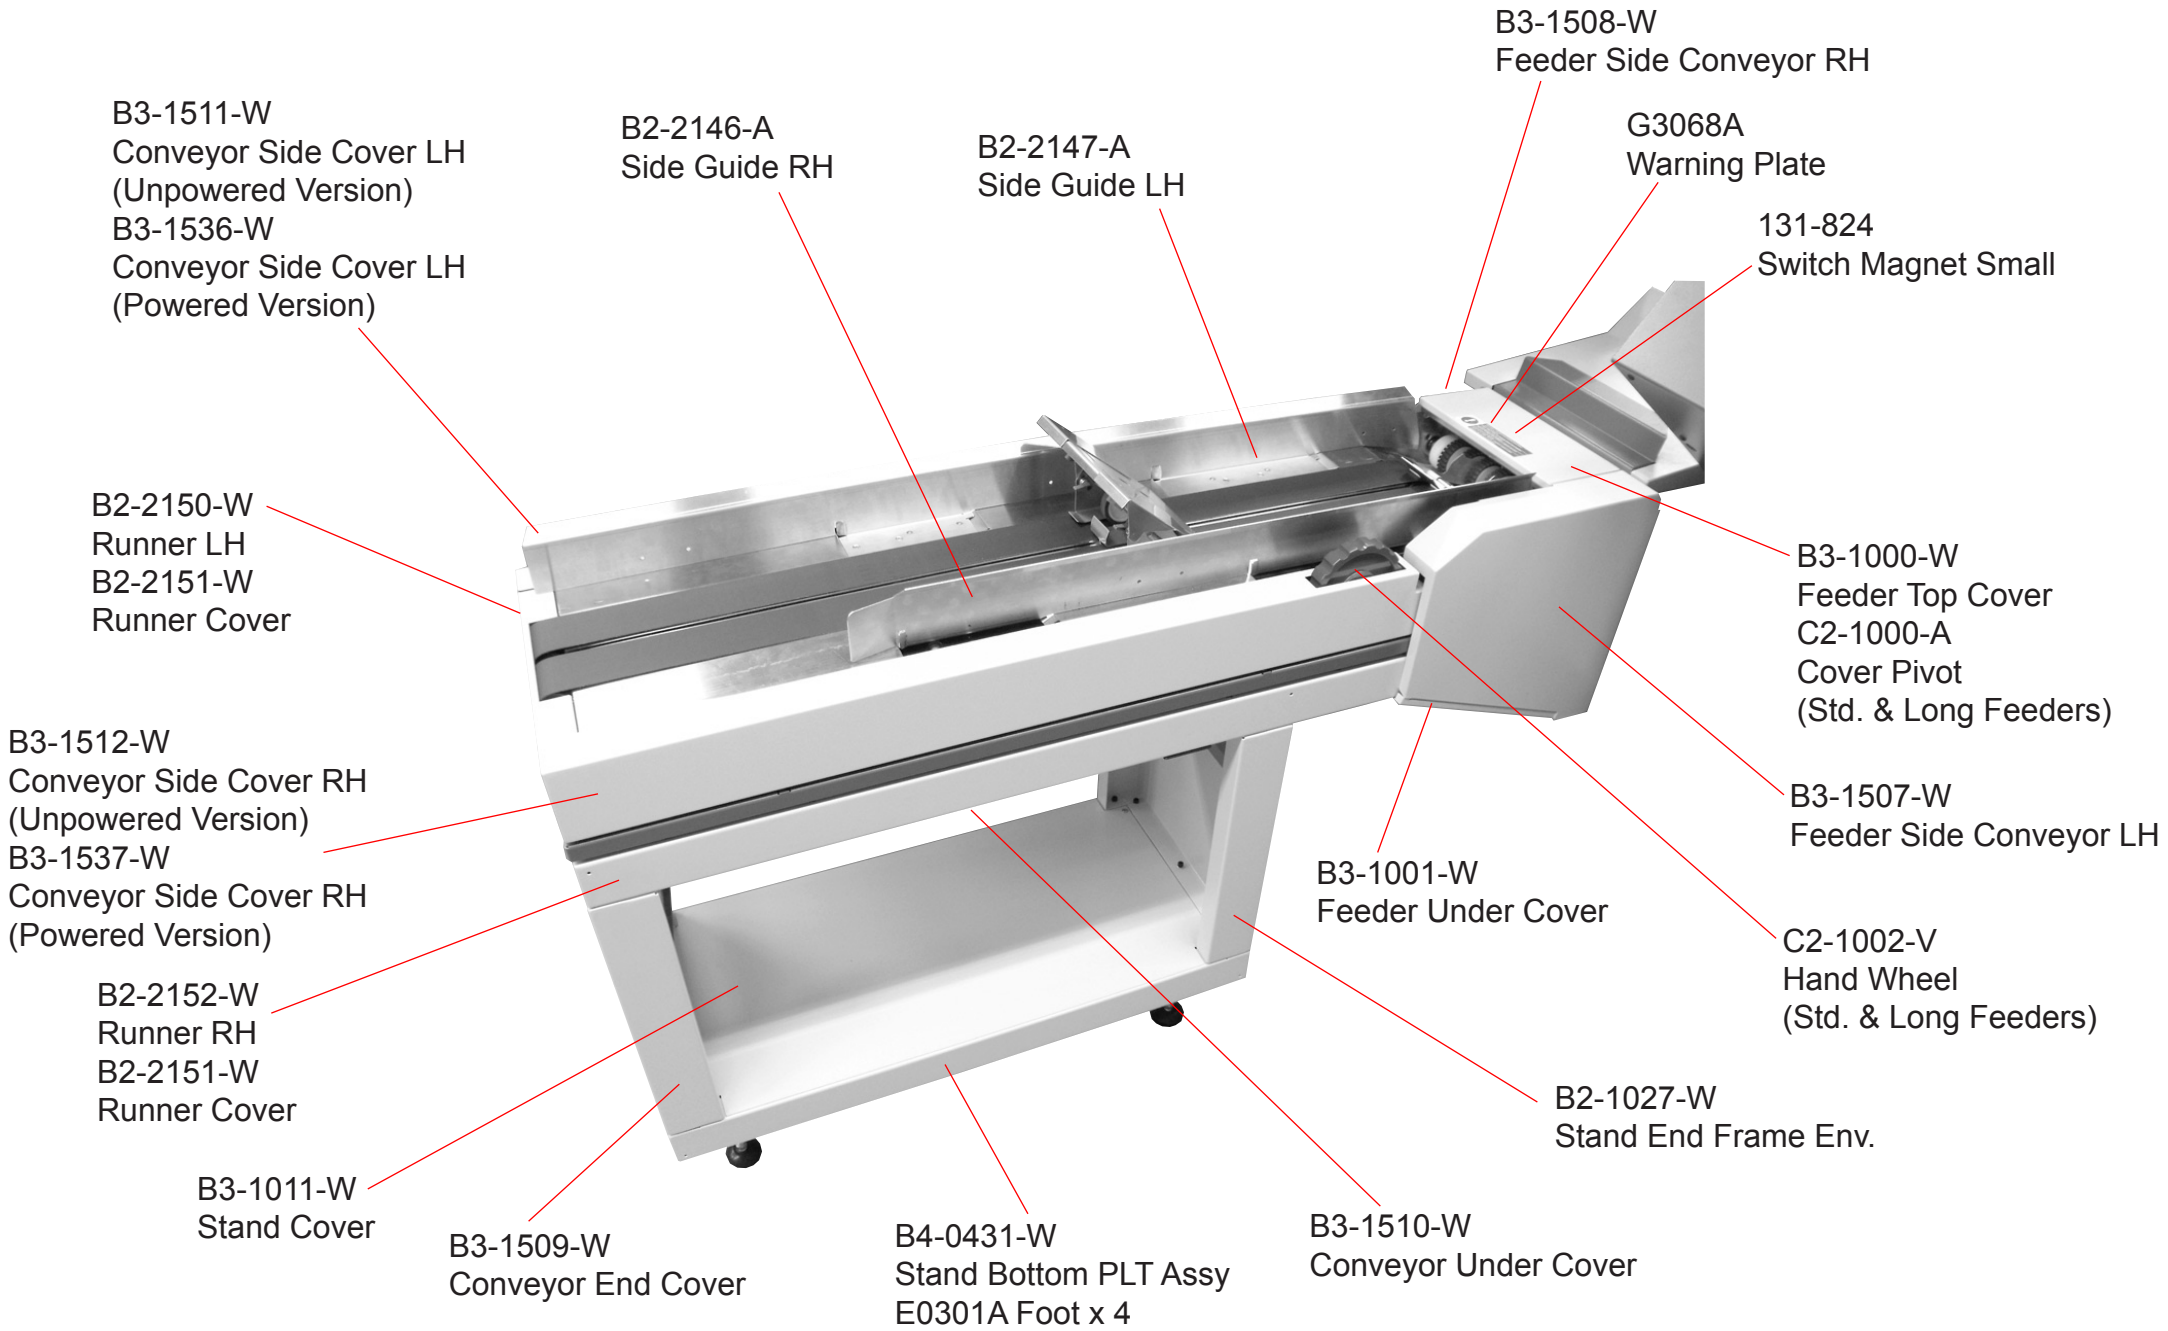

4d.22 - Pivoting Conveyor Assembly Covers (Closed)

A2-1416-A
Envelope Conveyor
Pivoting Assembly

C5-1282-A x 1
Brace
E2508A x 2
M5 x 12mm Cap Head Screw
E4012A x 2
M5 Washer

B2-2149-F x 1
Transit Clamp
E2508A x 2
M4 x 8mm Cap Head Screw
E2751A x 2
M5 Washer

C5-1282-A x 1
Brace
E2508A x 2
M5 x 12mm Cap Head Screw
E4012A x 2
M5 Washer

4d.23 - Pivoting Conveyor Assembly Covers (Open)

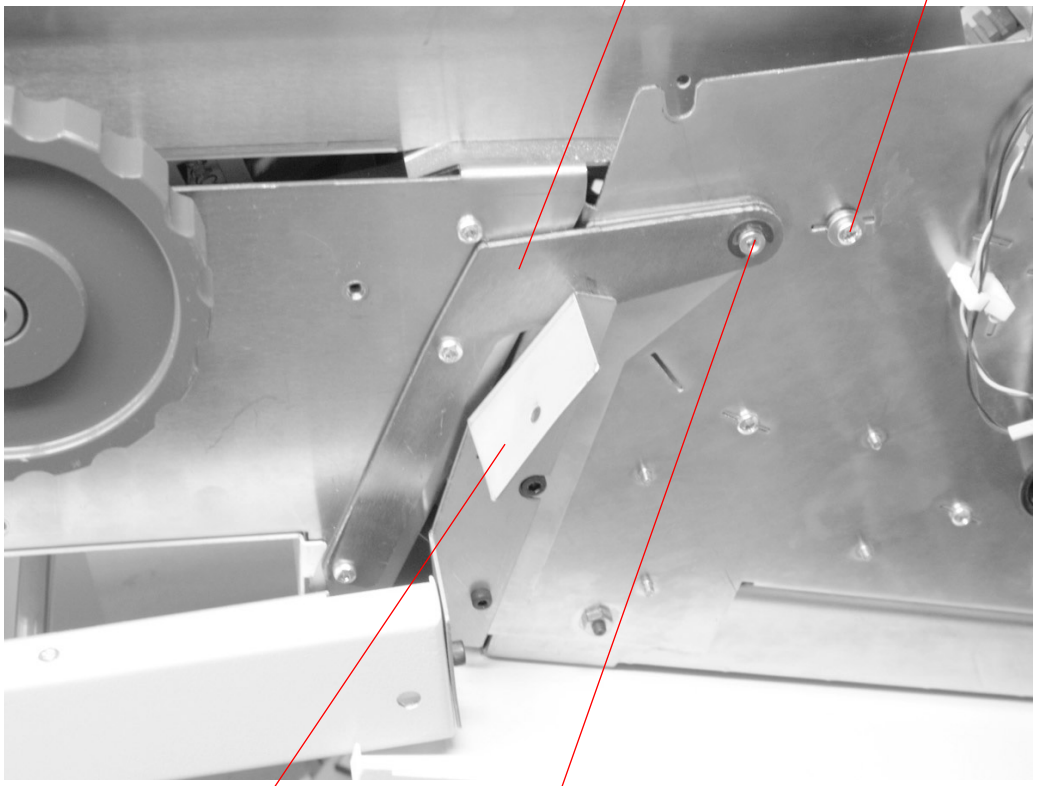

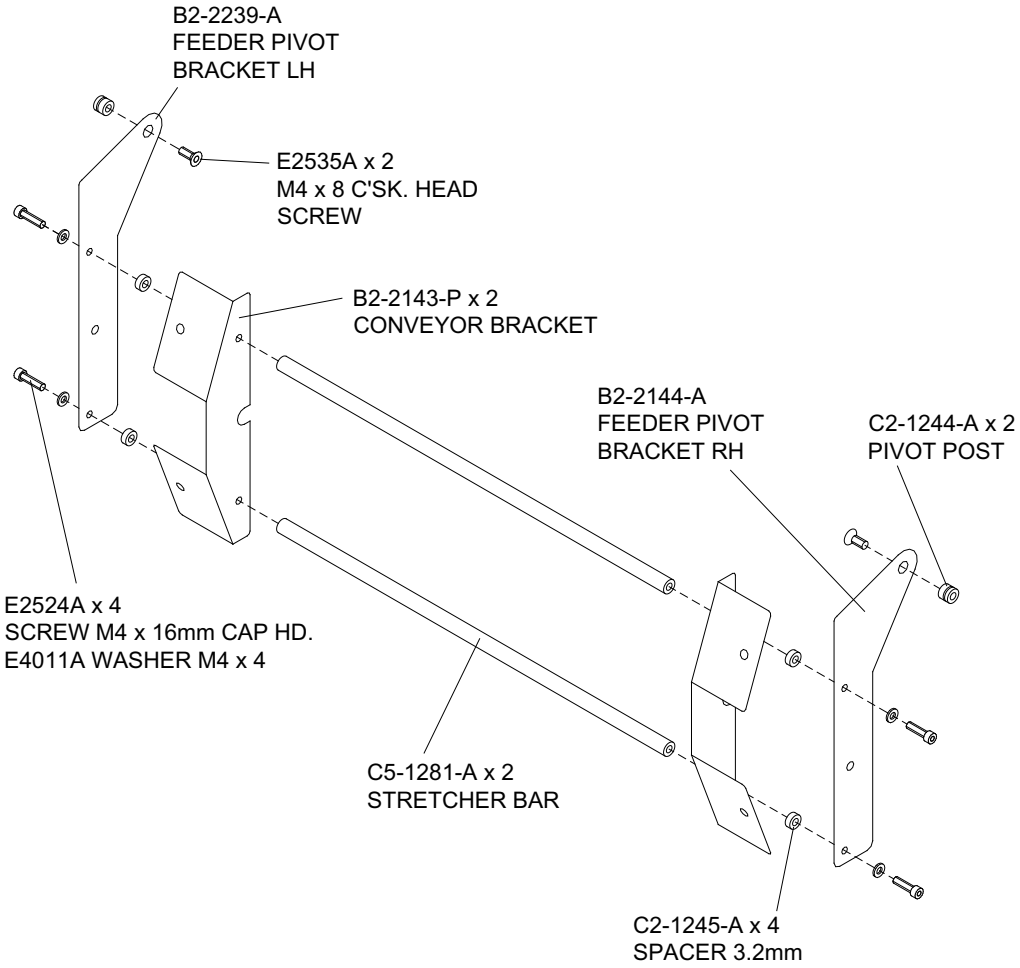

Sketch showing Pivoting Conveyor Assembly internal components

4d.24 - Pivoting Conveyor Assembly A2-1475-A